



CD/USB RECEIVER

CDE-152E/CDE-151E/CDE-150E



(CDE-152E/CDE-151E only)



(CDE-151E/CDE-150E only)



(CDE-152E only)

• OWNER'S MANUAL

Please read before using this equipment.

EN

• คู่มืออ้างอิงฉบับย่อ

สำหรับรายละเอียดของฟังก์ชันทั้งหมด โปรดอ้างอิงจากเนื้อหาภาษาอังกฤษ

• PANDUAN REFERENSI SINGKAT

Untuk informasi tentang semua fungsi, baca materi berbahasa Inggris.

TH
ID

ALPINE ELECTRONICS MARKETING, INC.

1-7, Yukigaya-Otsukamachi, Ota-ku,
Tokyo 145-0067, JAPAN
Phone: 03-5499-4531

ALPINE ELECTRONICS OF AMERICA, INC.

19145 Gramercy Place, Torrance,
California 90501, U.S.A.
Phone 1-800-ALPINE-1 (1-800-257-4631)

ALPINE ELECTRONICS OF AUSTRALIA PTY. LTD.

161-165 Princes Highway, Hallam
Victoria 3803, Australia
Phone 03-8787-1200

ALPINE ELECTRONICS GmbH

Wilhelm-Wagenfeld-Str. 1-3, 80807 München, Germany
Phone 089-32 42 640

ALPINE ELECTRONICS OF U.K. LTD.

Alpine House
Fletchamstead Highway, Coventry CV4 9TW, U.K.
Phone 0870-33 33 763

ALPINE ELECTRONICS FRANCE S.A.R.L.

(RCS PONTOISE B 338 101 280)
98, Rue de la Belle Etoile, Z.I. Paris Nord II,
B.P. 50016, 95945 Roissy Charles de Gaulle
Cedex, France
Phone 01-48638989

ALPINE ITALIA S.p.A.


 

 
 


Viale C. Colombo 8, 20090 Trezzano
Sul Naviglio (MI), Italy
Phone 02-484781

ALPINE ELECTRONICS DE ESPAÑA, S.A.

Portal de Gamarra 36, Pabellón, 32
01013 Vitoria (Alava)-APDO 133, Spain
Phone 945-283588

YAMAGATA (THAILAND) Co., Ltd.
324 Moo 4, Bangpoo Industrial Estate Soi6, Sukhumvit Road T.Phraksa,
A.Muang Samutprakarn, Samutprakarn 10280, Thailand

Designed by ALPINE Japan
Printed in Thailand (Y)
68-24567Z18-A

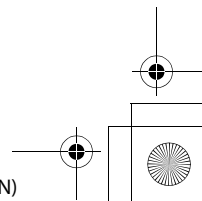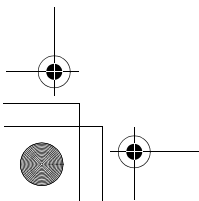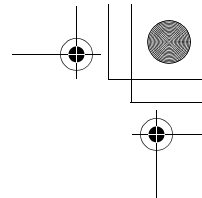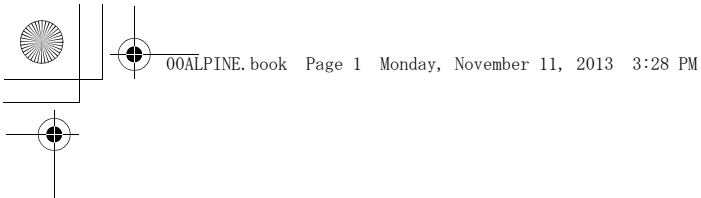

Contents

ENGLISH

Operating Instructions

WARNING

WARNING 4

CAUTION 4

PRECAUTIONS 4

Getting Started

Accessory List 7

Turning Power On and Off 7

Demonstration Function 7

Source Selection 7

Detaching and Attaching the Front Panel 7

Adjusting Volume 7

Setting Time 8

Radio

Listening to Radio 8

Presetting Stations Manually 8

Presetting Stations Automatically 9

Tuning to Preset Stations 9

Frequency Search Function 9

CD/MP3/WMA

Playback 9

Repeat and Random Play 10

Searching for CD Text
(concerning Audio CD) 10

Folder/File Name Search
(concerning MP3/WMA) 10

Search Position Memory 10

About MP3/WMA 10

Sound Setting

Adjusting Subwoofer Level/Bass Level/

Mid Level/Treble Level/Balance (Between Left
and Right)/Fader (Between Front and Rear)/

Loudness/Defeat 12

Audio Setup 12

BASS ENGINE SQ Function

Setting BASS ENGINE SQ ON/OFF 15

Adjusting BASS ENGINE SQ Level 15

Other Functions

Displaying the Text 16

Using the Front AUX Input Terminal 16

Option Menu Setting 16

SETUP

Setting 17

USB Memory (optional)

Playing MP3/WMA Files from USB Memory
(optional) 19

About MP3/WMA File of USB Memory 19

iPod/iPhone (optional)

(CDE-152E/CDE-151E only)

Connecting an iPod/iPhone 19

Setting the iPod Control 20

Playback 20

Searching for a desired Song 20

Direct Search Function 21

Select Playlist/Artist/Album/Genre/
Composer 21

Repeat and Random Play 21

Information

In Case of Difficulty 22

Specifications 24

Installation and Connections

WARNING 25

CAUTION 25

PRECAUTIONS 25

Installation 26

Connections 27

Operating Instructions

WARNING

WARNING

This symbol means important instructions. Failure to heed them can result in serious injury or death.

DO NOT OPERATE ANY FUNCTION THAT TAKES YOUR ATTENTION AWAY FROM SAFELY DRIVING YOUR VEHICLE.

Any function that requires your prolonged attention should only be performed after coming to a complete stop. Always stop the vehicle in a safe location before performing these functions. Failure to do so may result in an accident.

KEEP THE VOLUME AT A LEVEL WHERE YOU CAN STILL HEAR OUTSIDE NOISES WHILE DRIVING.

Excessive volume levels that obscure sounds such as emergency vehicle sirens or road warning signals (train crossings, etc.) can be dangerous and may result in an accident. LISTENING AT LOUD VOLUME LEVELS IN A CAR MAY ALSO CAUSE HEARING DAMAGE.

DO NOT DISASSEMBLE OR ALTER.

Doing so may result in an accident, fire or electric shock.

USE ONLY IN CARS WITH A 12 VOLT NEGATIVE GROUND.

(Check with your dealer if you are not sure.) Failure to do so may result in fire, etc.

KEEP SMALL OBJECTS SUCH AS BATTERIES OUT OF THE REACH OF CHILDREN.

Swallowing them may result in serious injury. If swallowed, consult a physician immediately.

USE THE CORRECT AMPERE RATING WHEN REPLACING FUSES.

Failure to do so may result in fire or electric shock.

DO NOT BLOCK VENTS OR RADIATOR PANELS.

Doing so may cause heat to build up inside and may result in fire.

USE THIS PRODUCT FOR MOBILE 12V APPLICATIONS.

Use for other than its designed application may result in fire, electric shock or other injury.

DO NOT PLACE HANDS, FINGERS OR FOREIGN OBJECTS IN INSERTION SLOTS OR GAPS.

Doing so may result in personal injury or damage to the product.

CAUTION

This symbol means important instructions. Failure to heed them can result in injury or material property damage.

HALT USE IMMEDIATELY IF A PROBLEM APPEARS.

Failure to do so may cause personal injury or damage to the product. Return it to your authorized Alpine dealer or the nearest Alpine Service Centre for repairing.

PRECAUTIONS

Product Cleaning

Use a soft dry cloth for periodic cleaning of the product. For more severe stains, please dampen the cloth with water only. Anything else has the chance of dissolving the paint or damaging the plastic.

Temperature

Be sure the temperature inside the vehicle is between +60°C (+140°F) and -10°C (+14°F) before turning your unit on.

Moisture Condensation

You may notice the CD playback sound wavering due to condensation. If this happens, remove the disc from the player and wait about an hour for the moisture to evaporate.

Damaged Disc


Do not attempt to play cracked, warped, or damaged discs. Playing a bad disc could severely damage the playback mechanism.

Maintenance

If you have problems, do not attempt to repair the unit yourself. Return it to your Alpine dealer or the nearest Alpine Service Station for servicing.

Never Attempt the Following

Do not grip or pull out the disc while it is being pulled back into the player by the automatic reloading mechanism.
Do not attempt to insert a disc into the unit when the unit power is off.

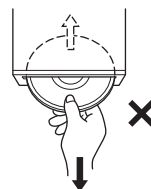

Inserting Discs


Your player accepts only one disc at a time for playback. Do not attempt to load more than one disc.

Make sure the label side is facing up when you insert the disc. "ERROR" will be displayed on your player if you insert a disc incorrectly.

Playing a disc while driving on a very bumpy road may result in skips, but this will not scratch the disc or damage the player.

New Discs

To prevent the CD from jamming, "ERROR" is displayed if discs with irregular surfaces are inserted or if discs are inserted incorrectly. When a new disc is ejected immediately after initial loading, use your finger to feel around the inside of the centre hole and outside edge of the disc. If you feel any small bumps or irregularities, this could inhibit proper loading of the disc. To remove the bumps, rub the inside edge of the hole and outside edge of the disc with a ballpoint pen or other such instrument, and then insert the disc again.

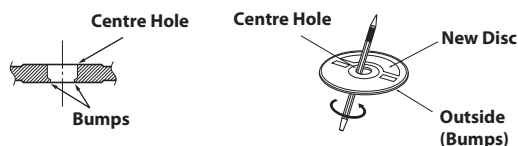

Irregular Shaped Discs

Be sure to use round discs only for this unit and never use any special shaped discs.

Use of special shape discs may cause damage to the mechanism.




Installation Location

Make sure this unit will not be installed in a location subjected to:

- Direct sun and heat
- High humidity and water
- Excessive dust
- Excessive vibrations

Correct Handling

Do not drop the disc while handling. Hold the disc so you will not leave fingerprints on the surface. Do not affix tape, paper, or gummed labels to the disc. Do not write on the disc.

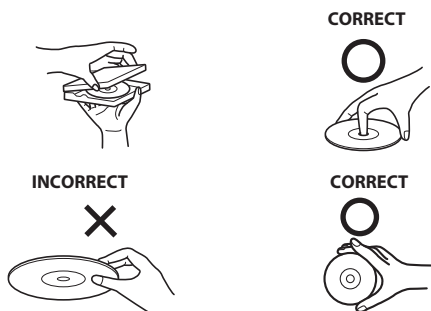


Disc Cleaning

Fingerprints, dust, or soil on the surface of the disc could cause the CD player to skip. For routine cleaning, wipe the playing surface with a clean, soft cloth from the centre of the disc to the outer edge. If the surface is heavily soiled, dampen a clean, soft cloth in a solution of mild neutral detergent before cleaning the disc.




Disc Accessories

 There are various accessories available on the market for protecting the disc surface and improving sound quality. However, most of them will influence the thickness and/or diameter of the disc. Using such accessories can cause the disc to be out of standard specifications and may create operational problems. We recommend not using these accessories on discs played in Alpine CD players.



Transparent Sheet

 

Disc Stabilizer

On handling Compact Discs (CD/CD-R/CD-RW)

- Do not touch the surface.
- Do not expose the disc to direct sunlight.
- Do not affix stickers or labels.
- Clean the disc when it is dusty.
- Make sure that there are no bumps around the disc.
- Do not use commercially available disc accessories.

Do not leave the disc in the car or the unit for a long time. Never expose the disc to direct sunlight. Heat and humidity may damage the CD and you may not be able to play it again.

To customers using CD-R/CD-RW

- If a CD-R/CD-RW cannot be played back, make sure the last recording session was closed (finalised).
- Finalise the CD-R/CD-RW if necessary, and attempt playback again.

About media that can be played

Use only compact discs with the label side showing the CD logo marks below.



If you use unspecified compact discs, correct performance cannot be guaranteed.

You can play CD-Rs (CD-Recordables)/CD-RWs (CD-ReWritables) which have been recorded only on audio devices. You can also play CD-Rs/CD-RWs containing MP3/WMA formatted audio files.

- Some of the following CDs may not play on this unit:
Flawed CDs, CDs with fingerprints, CDs exposed to extreme temperatures or sunlight (e.g., left in the car or this unit), CDs recorded under unstable conditions, CDs on which a recording failed or a re-recording was attempted, copy-protected CDs which do not conform to the audio CD industry standard.

- Use discs with compressed audio files written in a format compatible with this unit. For details, refer to page 10.
- ROM data other than audio files contained in a disc will not produce sound when played back.

Protecting the USB Port

- Only USB Memory devices and iPod/iPhone can be connected to the USB port on this unit. Correct performance using other USB products cannot be guaranteed. A USB hub is not supported.
- Depending on the shape or size of a USB Memory device, it may not be connected to the USB terminal of this unit—a USB extension (sold separately) is recommended for this connection.
Also, avoid connecting USB Memory and Front Aux at the same time.
- If a USB device is inserted in the unit, it projects out and may be a danger while driving.
Use a commercially available USB extension cable, and connect it in a safe way.
- Depending on the connected USB Memory device, the unit may not function or some functions may not be performed.
- The audio file format that can be played back on the unit is MP3/WMA.
- Artist/song name, etc., can be displayed, however some characters may not be correctly displayed.


On Handling USB Memory

CAUTION

Alpine accepts no responsibility for lost data, etc., even if data, etc., is lost while using this product.

- To prevent malfunction or damage, note the following points.
Read the USB Memory Owner's Manual thoroughly.
Do not touch the terminals by hand or metal.
Do not subject USB Memory to excessive shock.
Do not bend, drop, disassemble, modify or soak in the water.
- Fix the USB Memory in a location where driver operation will not be hindered.
- USB Memory may not function correctly at high or low temperature.
- Use only certified USB Memory. Please pay attention that even certified USB Memory, may not function correctly depending on its type or state.
- USB Memory function is not guaranteed. Use USB Memory according to the terms of agreement.
- Depending on the settings of the USB Memory type, memory state or encoding software, the unit may not play back or display properly.
- A file that is copy-protected (copyright protection) cannot be played back.
- USB Memory may take time to start playback. If there is a particular file other than audio in the USB Memory, it may take considerable time before the file is played back or searched.
- The unit can play back “mp3” or “wma” file extensions.
- Do not add the above extensions to a file other than audio data. This non-audio data will not be recognised. The resulting playback may contain noise that can damage speakers and/or amplifiers.
- It is recommended to back up important data on a personal computer.
- Do not remove the USB device while playback is in progress. Change SOURCE to something other than USB, and then remove the USB device to prevent possible damage to its memory.

Getting Started

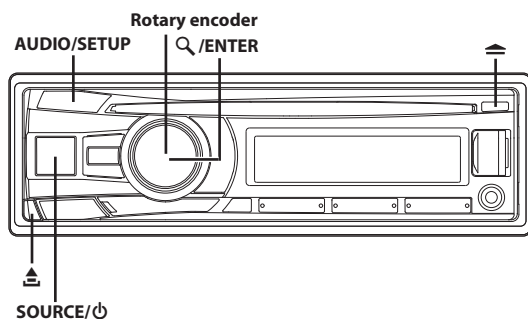

Accessory List

- Head Unit1
- Power Cable1
- Mounting Sleeve1
- Carrying Case.....1
- Bracket Key2
- Screw (M5 × 8)4
- Remote Control1
- Owner's Manual.....1 set

Turning Power On and Off

Press **SOURCE/⏻** to turn on the unit.

Note

- The unit can be turned on by pressing any other button except **⏻** and **⏻** (Release).

Press and hold **SOURCE/⏻** for at least 2 seconds to turn off the unit.

Note

- The first time power is turned on, the volume will start from level 12.

Demonstration Function

This unit has a demonstration feature for display. When Demo mode is set to ON (initial setting), the unit starts the demonstration if there is no operation for 30 seconds.

When installing this unit in a car for the first time, the DEMO OFF screen will be displayed for 30 seconds after turning on the unit.

Press **Q/ENTER** within 30 seconds to turn off the **Demonstration mode***.

Otherwise, the Demo mode remains ON and the unit starts the demonstration if there is no operation for 30 seconds.

* The operation is the same as setting DEMO MODE to OFF in the Setup menu. However, if the unit is disconnected from the vehicle's battery, DEMO MODE will be switched to ON automatically when the unit is used next time. If you want to completely close the Demo mode, set DEMO MODE to QUITE OFF. For details, please refer to page 18.

Source Selection

Press **SOURCE/⏻** to change the source.


TUNER → DISC → USB AUDIO/iPod*1 → AUXILIARY*2 → TUNER

*1 Only for CDE-152E/CDE-151E and when the iPod/iPhone is connected.

*2 Only when AUX SETUP is set to ON. Refer to page 18.

Detaching and Attaching the Front Panel


Detaching

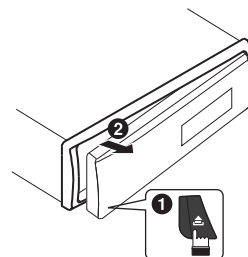

Notes

- The front panel may become hot in normal usage (especially the connector terminals on the back of the front panel). This is not a malfunction.
- To protect the front panel, place it in the supplied carrying case.
- When detaching the front panel, do not apply excessive force as it may result in malfunction.

Attaching

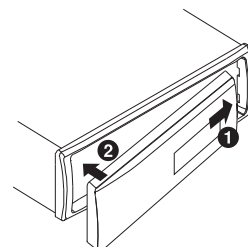

Notes

- Before attaching the front panel, make sure that there is no dirt or dust on the connector terminals and no foreign object between the front panel and the main unit.
- Attach the front panel carefully, holding the sides of the front panel to avoid pushing buttons by mistake.

Adjusting Volume

Turn the **Rotary encoder** until the desired sound is obtained.

Setting Time

- 1 Press and hold **AUDIO/SETUP** for at least 2 seconds to activate the **SETUP** selection mode.
- 2 Turn the **Rotary encoder** to select **GENERAL**, and then press **Q/ENTER**.
- 3 Turn the **Rotary encoder** to select the **CLOCK ADJ** mode, and then press **Q/ENTER**.
The time indication will blink.
- 4 Turn the **Rotary encoder** to adjust the hours while the time indication is blinking.
- 5 When the hour has been adjusted, press **Q/ENTER**.
- 6 Turn the **Rotary encoder** to adjust the minutes while the time indication is blinking.
- 7 Press and hold **AUDIO/SETUP** for at least 2 seconds to return to normal mode.


Notes

- To synchronize the clock to another clock/watch or radio time announcement, press and hold **Q/ENTER** for at least 2 seconds after setting the "hour". Minutes will reset to "00". If the display shows over "30" minutes when you do this, the time will advance one hour.
- Pressing **↵** will return to the previous mode.
- If no operation is performed for 60 seconds, the unit will return to normal mode automatically.


Controllable with Remote Control

This unit can be controlled with an Alpine remote control. For details, consult your Alpine dealer. Point the remote control transmitter at the remote-control sensor.

Remote control sensor

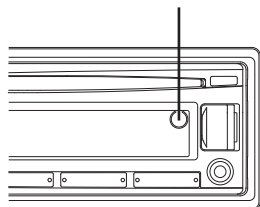

Radio

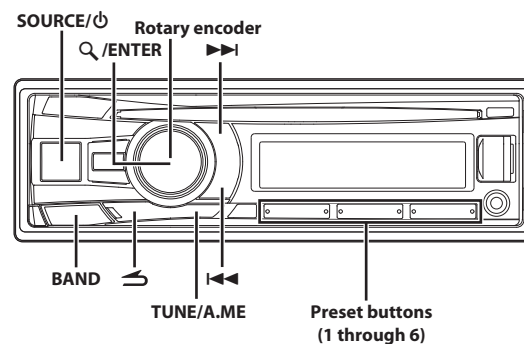

Listening to Radio

- 1 Press **SOURCE/⏻** to select **TUNER** mode.
- 2 Press **BAND** repeatedly until the desired radio band is displayed.
F1 (FM1) → F2 (FM2) → AM → F1 (FM1)
- 3 Press **TUNE/A.ME** to select the tuning mode.
SEEK DX (Distance mode) → SEEK LOCAL (Local mode) → MANUAL (Manual mode) → SEEK DX
Distance mode (Initial setting):
Both strong and weak stations will be automatically tuned in (Automatic Seek Tuning). The "**DX**" indicator lights up.
Local mode:
Only strong stations will be automatically tuned in (Automatic Seek Tuning).
Manual mode:
The frequency is manually tuned in steps (Manual tuning).
- 4 Press **◀◀** or **▶▶** to tune in the desired station.
In Manual mode, holding down **◀◀** or **▶▶** will change the frequency continuously.

Presetting Stations Manually

Select the radio band and tune in a desired radio station you wish to store in the preset memory. Press and hold for at least 2 seconds, any one of the **preset buttons (1 through 6)** into which you wish to store the station.

The selected station is stored.

The display shows the band, preset number and station frequency memorized.

Notes

- A total of 18 stations can be stored in the preset memory (6 stations for each band; FM1, FM2 and AM).
- If you store a station in a preset memory which already has a station, the current station will be cleared and replaced with the new station.

Presetting Stations Automatically

- 1 Press **BAND** repeatedly until the desired radio band is displayed.
- 2 Press and hold **TUNE/A.ME** for at least 2 seconds.
The tuner will automatically seek and store 6 strong stations in the selected band. They will be stored into preset buttons 1 to 6 in order of signal strength.
When the automatic memory has been completed, the tuner goes to the station stored in preset location No.1.

Note

- If no stations are stored, the tuner will return to the original station you were listening to before the auto memory procedure began.

Tuning to Preset Stations

- 1 Press **BAND** repeatedly until the desired band is displayed.
- 2 Press any one of the station preset buttons (1 through 6) that has your desired radio station in memory.
The display shows the band, preset number and frequency of the station selected.

Frequency Search Function


You can search for a radio station by its frequency.

- 1 Press **Q/ENTER** in Radio mode to activate Frequency search mode.
The "Q" indicator lights up.
- 2 Turn the **Rotary encoder** to select the desired frequency, and then press **Q/ENTER**.

Note


- Press **↵** in the search mode to cancel. Or, the search mode will be cancelled if no operation is performed for 10 seconds.

CD/MP3/WMA

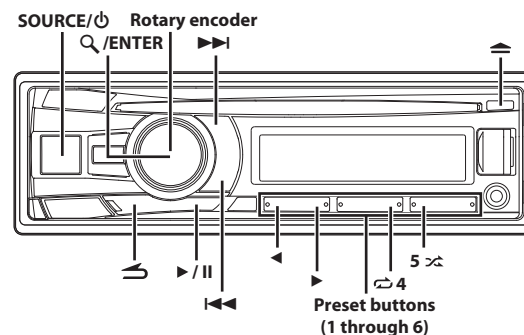

Playback

- 1 Insert a disc with the label side facing up.
The disc will be pulled into the unit automatically.

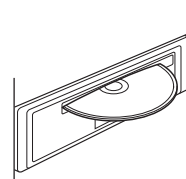

Note

- When a disc is already inserted, press **SOURCE/⏻** to switch to the DISC mode.

- 2 While playing back MP3/WMA, press **◀** or **▶** to select the desired folder.
Pressing and holding **◀** or **▶** will change folders continuously.
- 3 Press **⏮** or **⏭** to select the desired track (file).
Pressing and holding **⏮** or **⏭** will fast backward/fast forward track continuously.
- 4 To pause playback, press **⏸/II**.
Pressing **⏸/II** again will resume playback.
- 5 To eject the disc, press **⏏**.

Notes

- Do not remove a CD during its eject cycle. Do not load more than one disc at a time. A malfunction may result from doing either.
- The "CD" indicator lights up when a disc is inserted.
- Three-inch (8 cm) CDs cannot be used.
- Any file protected by DRM (Digital Rights Management) copy protection, cannot be played back on this unit.
- The track display for MP3/WMA data playback is the file numbers recorded on the disc.
- The playback time may not be correctly displayed when a VBR (Variable Bit Rate) recorded file is played back.
- During CD/MP3/WMA playback, press **↵**, and then you can quickly return to the hierarchy level selected last time in the search mode.

Repeat and Random Play

- 1 During playback, Press **↺** 4 or 5 **↻** repeatedly until the setting appears.

RPT ONE **↺**:

Track/file is played back repeatedly.

RPT FOLDER **↺** **📁**:

Files in a folder are played back repeatedly.

MIX FOLDER **↺** **📁** **↻**:

Files in a folder are played back randomly.

MIX ALL **ALL** **↻**:

All files in the disc or USB Memory are played back randomly.

* When MP3/WMA files are played back.

- 2 To cancel repeat or M.I.X. play, select (off) with the above procedure.

Searching for CD Text (concerning Audio CD)

On discs utilizing CD Text, songs can be searched and played by using their recorded titles. For discs without CD Text, searches are made using the track numbers associated with each song.

- 1 Press **Q** /ENTER during play.
This will set the search mode, and the "Q" indicator lights up.
- 2 Turn the Rotary encoder to select the desired track, and then press **Q** /ENTER.
This will play the selected track.

Notes

- Press **↺** in the search mode to cancel. Or, the search mode is cancelled if no operation is performed for 10 seconds.
- When CD Text Search is made during M.I.X. play, the M.I.X. play mode will be cancelled.
- Press any of the **preset buttons (1 through 6)** during a search to skip over a calculated percentage of tracks. For details, refer to page 21.

Folder/File Name Search (concerning MP3/WMA)

Folder and file names may be searched and displayed during playback.

Folder Name Search mode

- 1 During MP3/WMA playback, press **Q** /ENTER to activate the search mode.
The "Q" indicator lights up.
- 2 Turn the Rotary encoder to select Folder Name Search mode, and then press **Q** /ENTER.
- 3 Turn the Rotary encoder to select the desired folder.
- 4 Press and hold **Q** /ENTER for at least 2 seconds to play back the first file in the selected folder.

Notes

- Press any of the **preset buttons (1 through 6)** during a Folder Name search to skip over a calculated percentage of folders. For details, refer to page 21.

- Press and hold **↺** for at least 2 seconds in the search mode to cancel. Or, the search mode is cancelled if no operation is performed for 10 seconds.
- To search for files in the Folder Name Search mode, press **Q** /ENTER. Files in the folder may be searched.
- Press **↺** to exit Folder Name Search mode in step 3 in order to select File Name Search mode.
- The root folder is displayed as "ROOT".
- When Folder Name Search is made during M.I.X. play, the M.I.X. play mode will be cancelled.

File Name Search mode

- 1 During MP3/WMA playback, press **Q** /ENTER to activate the search mode.
The "Q" indicator lights up.
- 2 Turn the Rotary encoder to select File Name Search mode, and then press **Q** /ENTER.
- 3 Select the desired file by turning the Rotary encoder.
- 4 Press **Q** /ENTER to play back the selected file.

Notes

- Press any of the **preset buttons (1 through 6)** during a File Name search to skip over a calculated percentage of files. For details, refer to page 21.
- Press and hold **↺** for at least 2 seconds in the search mode to cancel. Or, the search mode is cancelled if no operation is performed for 10 seconds.
- Press **↺** in the search mode to return to the previous mode.
- When File Name Search is made during M.I.X. play, the M.I.X. play mode will be cancelled.

Search Position Memory

During playback, you can quickly return to the last-selected hierarchy level in the search mode.

Press **↺**.

The hierarchy you selected last in the search mode is displayed.

About MP3/WMA

⚠ CAUTION

Except for private use, duplicating audio data (including MP3/WMA data) or distributing, transferring, or copying it, whether for free or for a fee, without permission of the copyright holder is strictly prohibited by the Copyright Act and by international treaty.

What is MP3?

MP3, whose official name is "MPEG Audio Layer 3," is a compression standard prescribed by the ISO, the International Standardisation Organisation and MPEG which is a joint activity institution of the IEC. MP3 files contain compressed audio data. MP3 encoding is capable of compressing audio data at extremely high ratios, reducing the size of music files to as much as one-tenth their original size. This is achieved while still maintaining near CD quality. The MP3 format realises such high compression ratios by eliminating the sounds that are either inaudible to the human ear or masked by other sounds.

What is WMA?

WMA, or "Windows Media™ Audio," is compressed audio data. WMA is similar to MP3 audio data.

Method for creating MP3/WMA files

Audio data is compressed using software with MP3/WMA codecs. For details on creating MP3/WMA files, refer to the user's manual for that software.
MP3/WMA files that are playable on this device have the file extensions "mp3" / "wma". Files with no extension cannot be played back (WMA ver. 7.1, 8 and 9 are supported).

Supported playback sampling rates and bit rates

MP3

Sampling rates: 48 kHz, 44.1 kHz, 32 kHz, 24 kHz, 22.05 kHz, 16 kHz, 12 kHz, 11.025 kHz, 8 kHz

Bit rates: 8 - 320 kbps

WMA

Sampling rates: 48 kHz, 44.1 kHz, 32 kHz

Bit rates: 32 - 192 kbps

This device may not play back correctly depending on sampling rates.

ID3 tags/WMA tags

This device supports ID3 tag v1 and v2, and WMA tag.

If tag data is in an MP3/WMA file, this device can display the title (track title), artist name, and album name ID3 tag/WMA tag data.

This device can only display single-byte alphanumeric characters (up to 30 for ID3 tags and up to 15 for WMA tags) and the underscore. For non-supported characters, "NO SUPPORT" is displayed.

If information contains characters other than ID3 tag information, the audio file may not be played back.

The tag information may not be correctly displayed, depending on the contents.

Playing back MP3/WMA

MP3/WMA files are prepared, then written to a CD-R, CD-RW using CD-R writing software or stored to a USB Memory. A disc can hold up to 509 files/folders (including Root Folders), and the maximum number of folders is 255.

Playback may not be performed if a disc exceeds the limitations described above.

Do not make a file's playback time more than 1 hour.

Media supported

The media that this device can play back are CD-ROMs, CD-Rs, and CD-RWs.

Corresponding File Systems

This device supports discs formatted with ISO9660 Level 1 or Level 2. Under the ISO9660 standard, there are some restrictions to remember. The maximum nested folder depth is 8 (including the root directory). The number of characters for a folder/file name is limited. Valid characters for folder/file names are letters A-Z (all caps), numbers 0-9, and '_' (underscore).

This device also can play back discs in Joliet, Romeo, etc., and other standards that conform to ISO9660. However, sometimes the file names, folder names, etc., are not displayed correctly.


Formats supported

This device supports CD-ROM XA, Mixed Mode CD, Enhanced CD (CD-Extra) and Multi-Session.

This device cannot correctly play back discs recorded with Track At Once or packet writing.

Order of files

Files are played back in the order that the writing software writes them to the disc. Therefore, the playback order may not be what is expected. Verify the writing order in the software's documentation. The playback order of the folders and files is as follows.

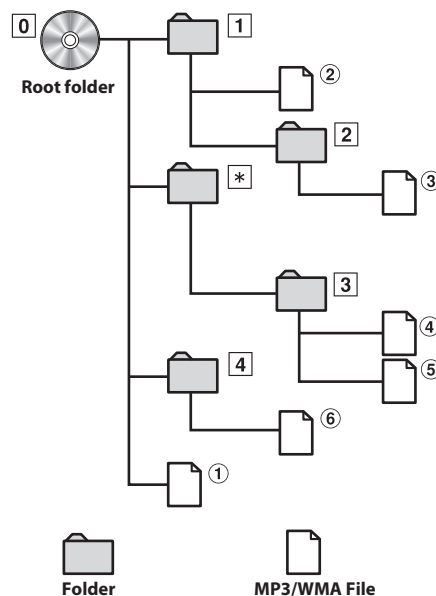

* The folder No./ folder Name will not be displayed if no readable file is contained in the folder.

Terminology

Bit rate

This is the "sound" compression rate specified for encoding. The higher the bit rate, the higher the sound quality, but also the larger the files.

Sampling rate

This value shows how many times per second the data is sampled (recorded). For example, music CDs use a sampling rate of 44.1 kHz, so the sound is sampled (recorded) 44,100 times per second. The higher the sampling rate, the higher the sound quality, but also the larger the volume of data.

Encoding

Converting music CDs, WAVE (AIFF) files, and other sound files into the specified audio compression format.


Tag

Song information such as track titles, artist names, album names, etc., written into MP3/WMA files.

Root folder

The root folder (or root directory) is found at the top of the file system. The root folder contains all folders and files. It is created automatically for all burned discs.

Sound Setting

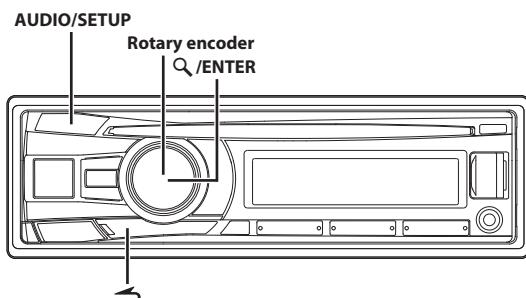

Adjusting Subwoofer Level/Bass Level/Mid Level/Treble Level/Balance (Between Left and Right)/Fader (Between Front and Rear)/Loudness/Deafat

- 1 Press **AUDIO/SETUP** repeatedly to choose the desired mode.

Subwoofer ^{*1/*3}	+0 ~ +15
Bass level ^{*2/*3}	-7 ~ +7
Mid level ^{*2/*3}	-7 ~ +7
Treble level ^{*2/*3}	-7 ~ +7
Balance	L15 ~ R15
Fader	R15 ~ F15
Loudness ^{*2/*3}	ON/OFF
Deafat	ON/OFF
Volume	0 ~ 35

^{*1} When the SUBWOOFER mode is set to OFF, its level cannot be adjusted.

^{*2} Adjustable only when DEFEAT is OFF.

^{*3} Not displayed when BASS ENGINE SQ mode is on. (Page 13)

Note

- If no operation is performed for 5 seconds, the unit automatically returns to normal mode.

- 2 Turn the **Rotary encoder** until the desired sound is obtained in each mode.

By setting DEFEAT ON, previously adjusted settings of BASS, MID, TRE LEVEL and LOUDNESS will return to the factory defaults.

Audio Setup

You can flexibly customize the unit to suit your own preference and usage. From the AUDIO SETUP menu, Audio Setting can be modified.

Use steps 1 to 5 to select one of the setting modes to modify. See the applicable section below for details about the selected setting item.

- 1 Press and hold **AUDIO/SETUP** for at least 2 seconds to activate the **SETUP** mode.
- 2 Turn the **Rotary encoder** to select **AUDIO**, and then press **Q/ENTER**.

Note

- When BASS ENGINE SQ setting is set to OFF (MANUAL SET) (page 13), you can also activate the Audio Setup mode directly by pressing **BASS**.

- 3 Turn the **Rotary encoder** to select the desired sound setting menu, and then press **Q/ENTER**.

EQ PRESETS^{*1/*3/*4} ↔ BASS ENGINE^{*2} ↔ LOUDNESS^{*1/*3} ↔
3BAND EQ^{*1/*3/*4/*5} ↔ SOURCE VOL ↔ SUBWOOFER ↔
SUBW LPF^{*1/*3/*6} ↔ SUBW PHASE^{*6/*7} ↔ SUBW SYS^{*3/*6} ↔
POWER IC

(e.g. Select SUBWOOFER)

^{*1} Adjustment cannot be performed when DEFEAT is set to ON.

^{*2} Not displayed when the Audio Setup mode is activated by pressing **BASS** in MANUAL SET mode (page 15).

^{*3} These items are set uniformly in BASS ENGINE SQ mode by adjusting BASS ENGINE SQ Level (page 15) and cannot be adjusted separately. If you want to change these settings separately, a message is displayed asking you to confirm that you want to exit the BASS ENGINE SQ mode. Select "YES" to make the setting.

^{*4} Any changes made to either EQ PRESETS or 3BAND EQ are reflected in the other's settings.

^{*5} In step 3, three sound adjustment items (Bass, Mid and Treble) can be selected in 3BAND EQ mode. Turn the **Rotary encoder** to select the desired item, and then press **Q/ENTER** to continue to step 4.

^{*6} These functions are inoperable when SUBWOOFER is set to OFF.

^{*7} This function is inoperable when SUBW LPF is set to OFF (page 13).

- 4 Turn the **Rotary encoder** to change the setting, and then press **Q/ENTER**.

(e.g. Select SUBW ON or SUBW OFF)

- 5 Press and hold **AUDIO/SETUP** for at least 2 seconds to return to normal mode.

Notes

- Pressing **↵** returns to the previous Sound menu mode.
- Pressing and holding **↵** for at least 2 seconds will return to normal mode.
- If no operation is performed for 60 seconds, Sound menu mode is cancelled.

Equalizer Presets

10 typical equalizer settings are preset at the factory for a variety of musical source material. USER settings are created in the 3BAND EQ mode.

Setting item: EQ PRESETS

Setting contents:

USER / FLAT (Initial setting) / POPS / ROCK / NEWS / JAZZ / ELEC DANCE / HIP HOP / EASY LIS / COUNTRY / CLASSICAL

Setting BASS ENGINE SQ ON/OFF

This unit has a BASS ENGINE SQ feature for Sound adjustment.

Setting item: BASS ENGIN

Setting contents:

OFF (Initial setting) / ON


OFF (MANUAL SET mode):

Adjust each audio effect setting separately.

ON (BASS ENGINE SQ mode):

Adjust the Bass relative audio effect settings uniformly by adjusting the BASS ENGINE SQ Level (page 15).

Notes

- You can also set BASS ENGINE SQ ON/OFF directly by pressing and holding **BASS**. Refer to page 15.
- " " indicator lights up when BASS ENGINE SQ mode is ON.
- With BASS ENGINE SQ ON, adjusting the BASS ENGINE SQ Level uniformly effects various sound parameters for optimum Bass effect. Refer to page 15.

Turning Loudness On/Off

Loudness introduces a special low-and high-frequency emphasis at low listening levels. This compensates for the ear's decreased sensitivity to bass and treble sound.

Setting item: LOUDNESS

Setting contents:

LOUD OFF (Initial setting) / LOUD ON

Adjusting the Parametric Equalizer Curve (3BAND EQ)

You can modify the Equalizer settings to create a response curve more appealing to your personal taste. The setting of Bass, Mid and Treble can be adjusted in this mode.

Setting item: 3BAND EQ

Further setting items: BASS / MID / TREBLE

Setting the Control

- After selecting BASS/MID/TREBLE from the 3BAND EQ adjustment mode, turn the **Rotary encoder** to select the desired setting item, and then press **Q/ENTER**.
WIDTH (Q) ↔ CENTER FRQ ↔ LEVEL
- Turn the **Rotary encoder** to select the desired setting value, and then press **Q/ENTER**.
- Press **↶** to return to the previous step.

Setting the Bandwidth (WIDTH (Q))

BASS	WIDE 0.50 ↔ MEDIUM 1.00 ↔ MEDIUM 1.50 ↔ NARROW 2.00
MID	WIDE 0.75 ↔ MEDIUM 1.00 ↔ MEDIUM 1.25 ↔ NARROW 1.50
TREBLE	WIDE 0.75 ↔ NARROW 1.25

Changes the boosted bandwidth to wide or narrow. A wider setting will boost a wide range of frequencies above and below the centre frequency. A narrower setting will boost only frequencies near the centre frequency.

Setting the Centre Frequency (CENTER FRQ)

BASS	60 (Hz) ↔ 80 (Hz) ↔ 100 (Hz) ↔ 120 (Hz)
MID	500 (Hz) ↔ 1.0K (Hz) ↔ 1.5K (Hz) ↔ 2.5K (Hz)
TREBLE	7.5K (Hz) ↔ 10.0K (Hz) ↔ 12.5K (Hz) ↔ 15.0K (Hz)

Emphasises the displayed frequency ranges.

Setting the Level*

BASS	-7 ~ +7
MID	-7 ~ +7
TREBLE	-7 ~ +7

You can emphasise or weaken the level.

* The adjustment can also be made by pressing **AUDIO**. Refer to page 12.

Setting the Source Volume Level

The output level of each source is individually adjustable. For example, if the TUNER level sounds lower than CD, its output can be adjusted without affecting the other sources.

Setting item: SOURCE VOL

Further setting items: TUNER / DISC / USB / iPod*1 / AUX

Setting contents:

-14 dB ~ +14 dB

*1 CDE-152E/CDE-151E only.

Turning Subwoofer ON/OFF

When the subwoofer is on, you can adjust the subwoofer output level (refer to page 12).

Setting item: SUBWOOFER

Setting contents:

OFF / ON (Initial setting)

OFF:

No subwoofer signal is output from the Subwoofer RCA Connectors (refer to page 27).

ON:

The subwoofer signal is output from the Subwoofer RCA Connectors (refer to page 27).

Adjusting the Low Pass Filter

The Low Pass Filter on this unit can be adjusted to suit your personal taste.

Setting item: SUBW LPF

Setting contents:

OFF (Initial setting) / 60 (Hz) / 80 (Hz) / 120 (Hz) / 160 (Hz)

All frequencies lower than the selected cutoff are output.

Setting the Subwoofer Phase

The subwoofer output phase is toggled between SUBWOOFER NORMAL (0°) or SUBWOOFER REVERSE (180°). To adjust the level, turn the **Rotary encoder**.

Setting item: SUBW PHASE

Setting contents:

NORMAL (Initial setting) / REVERSE

Setting the Subwoofer System

When the subwoofer is on, you can select either SYS 1 or SYS 2 for the desired subwoofer effect.

Setting item: SUBW SYS

Setting contents:

SUBW SYS 1 / SUBW SYS 2 (Initial setting)

SUBW SYS 1:

Subwoofer level changes according to the main volume setting.

SUBW SYS 2:

Subwoofer level change is different from the main volume setting. For example, even at low volume settings, the subwoofer is still audible.

External Device

Connecting to an External Amplifier (POWER IC)

When an external amplifier is connected, sound quality can be improved by stopping the power supply of the built-in amplifier.

Setting item: POWER IC

Setting contents:

OFF / ON (Initial setting)


OFF:

Use this mode when the line output of this unit is used to drive an external amplifier. In this setting, the head unit's internal amplifier is turned OFF and cannot drive speakers.


ON:

The speakers are driven by the built-in amplifier.

OFF:

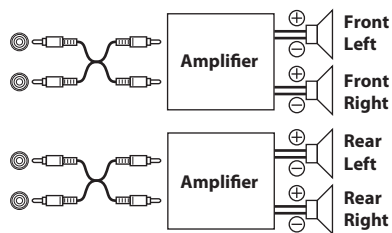


ON:

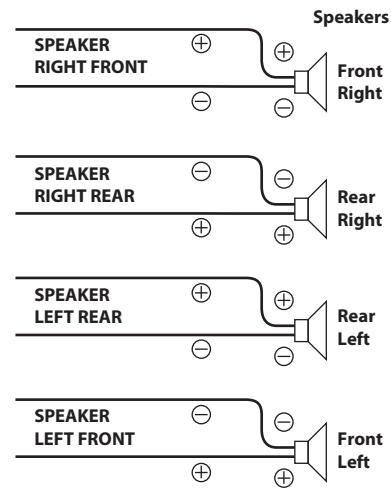

Note

- No sound is produced by the system when the power output is set to OFF.

BASS ENGINE SQ Function

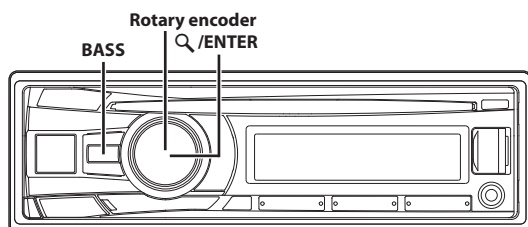

With the BASS ENGINE SQ function on this unit, several parameters affecting Bass performance are adjusted simultaneously. The BASS ENGINE SQ Level adjustment varies these parameters uniformly for optimum Bass effect at different levels.

About Setup when the external power amplifier is connected.

In order to optimize the BASS ENGINE SQ, we recommend the following power amplifier setup.

After setting up, you can adjust the BASS ENGINE SQ Level according to the music.

- 1 Set gain of the power amplifier to "MIN".
- 2 Set the Crossover Mode Sector switch to "OFF".
- 3 Set the BASS ENGINE of this unit to "ON", and the BASS ENGINE SQ Level to "+3".
- 4 Play a song of the genre you frequently listen to, and adjust gain of the power amplifier.

Setting BASS ENGINE SQ ON/OFF

Press and hold **BASS** for at least 2 seconds to switch the sound mode.

BASS ENGINE ↔ MANUAL SET (Initial setting)

BASS ENGINE SQ On (BASS ENGINE):

Adjust the relevant Bass parameters uniformly by adjusting the BASS ENGINE SQ Level (page 15).

BASS ENGINE SQ Off (MANUAL SET):

Adjust each audio effect setting separately.

Notes

- This operation can also be performed by selected BASS ENGINE in Audio Setup mode. (Page 13)
- "BASS" indicator lights up when BASS ENGINE SQ mode is ON.

Adjusting BASS ENGINE SQ Level


With BASS ENGINE SQ ON, adjusting the BASS ENGINE SQ Level uniformly effects various sound parameters for optimum Bass effect.

- 1 Press **Bass** to display the BASS ENGINE SQ Level adjustment screen.
- 2 Turn the **Rotary encoder** to select the desired level (0 ~ +6) (initial setting: +3), and then press **Q/ENTER**.

Notes

- Adjustable only when DEFEAT is OFF.
- The Bass parameters affected contain EQ PRESETS, LOUDNESS, 3BAND EQ, SUBW LPF, SUBW SYS and SUBWOOFER Level. These items are set uniformly in BASS ENGINE SQ mode and cannot be adjusted separately.
- From Level 0 to Level 6, the effect of BASS ENGINE SQ increases level by level.
- "BASS" indicator displays the current BASS ENGINE SQ Level.
- If no operation is performed for 5 seconds, the unit automatically returns to normal mode.

Other Functions

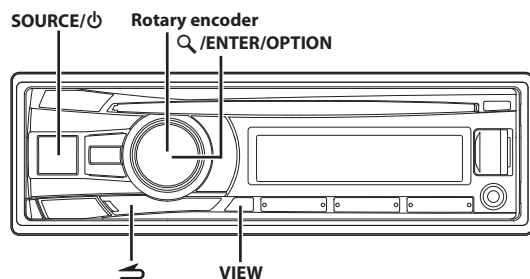

Displaying the Text

Text information, such as the disc name and the track name, will be displayed if playing a CD text compatible disc. It is also possible to display the folder name, the file name and the tag, etc., while playing MP3/WMA files.

Press **VIEW**.

The display will change every time the button is pressed.

Note

- When the TEXTSCROLL is set to SCR MANUAL (refer to page 18), press and hold **VIEW** for at least 2 seconds, the current text will be scrolled one time (except Radio mode).

The display in Radio mode:

FREQUENCY → CLOCK → FREQUENCY

The display in CD mode:

TRACK NO./ELAPSED TIME → TEXT (DISC NAME)^{*1} →
TEXT (TRACK NAME)^{*1} → TRACK NO./CLOCK →
TRACK NO./ELAPSED TIME

The display in MP3/WMA mode:

FILE NO./ELAPSED TIME → FOLDER NO./FILE NO. →
FOLDER NAME^{*2} → FILE NAME^{*2} → ARTIST NAME^{*3} →
ALBUM NAME^{*3} → SONG NAME^{*3} → FILE/CLOCK →
FILE NO./ELAPSED TIME

The display in iPod mode (CDE-152E/CDE-151E only):

TRACK NO./ELAPSED TIME → ARTIST NAME^{*3} →
ALBUM NAME^{*3} → SONG TITLE^{*3} → TRACK NO./CLOCK →
TRACK NO./ELAPSED TIME

^{*1} Displayed during playback of a disc with CD text.

If there is no text (Disc Name or Track Name), "DISC TEXT"/"TRACK TEXT" is displayed.

^{*2} If there is no text (Folder Name or File Name), "FOLDER"/"FILE" is displayed.

^{*3} If an MP3/WMA file contains ID3 tag/WMA tag information, the ID3 tag/WMA tag information is displayed (e.g., song name, artist name, and album name). All other tag data is ignored.
If there is no tag information, "ARTIST"/"ALBUM"/"SONG" is displayed.

About "Text"

Text compatible CDs contain text information such as the disc name and track name. Such text information is referred to as "text".

Notes

- Some characters may not be displayed correctly with this device, depending on the character type.
- "NO SUPPORT" is displayed if text information is not supported by the unit.
- The text or tag information may not be correctly displayed, depending on the contents.

Using the Front AUX Input Terminal

Connect a portable music player, etc. by simply connecting it to the input on the front panel. An optional adapter cable is required (standard RCA to 3.5ø mini-phono plug or 3.5ø to 3.5ø mini phono plug).

Press **SOURCE/φ**, and select the **AUXILIARY** mode to listen to the portable device.

Notes

- This function is available only when AUX SETUP is set to ON. For details, refer to page 18.
- If a USB Memory device is directly connected to the Front USB terminal, the size or shape may interfere with driving operations. Avoid making connections to the AUX Input and USB Input terminals at the same time.

Option Menu Setting

You can quickly adjust the setting items relevant to the current SOURCE by using Option Menu.

- Press and hold **Q/ENTER/OPTION** for at least 2 seconds to activate the Option menu of the current source.

Note

- The option menu varies depending on the source.

- Turn the **Rotary encoder** to select the desired setting item, and then press **Q/ENTER**.

- Turn the **Rotary encoder** to change the setting, and then press **Q/ENTER**.

After the setting, the display will return to the current source automatically.

Setting item:

TUNER mode:

SOURCE VOL^{*1}

DISC mode:

CD SET^{*2} ↔ SOURCE VOL^{*1}

USB mode:

SOURCE VOL^{*1}

iPod mode (CDE-152E/CDE-151E only):

APP DIRECT^{*3} ↔ iPod SET^{*4} ↔ SOURCE VOL^{*1}


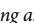
AUX mode:

AUX SET^{*5} ↔ SOURCE VOL^{*1}


- ^{*1} You can individually emphasise or weaken the volume level of the current source to create your own tonal preference. The setting values in Option mode and in SETUP mode are linkage. Refer to page 13.

- *2 *PLAY MODE can be selected in this mode. For details, refer to page 18.*
- *3 *Refer to page 20.*
- *4 *The setting items are the same as iPod setting in SETUP mode. For details, refer to page 18.*
- *5 *AUX NAME can be selected in this mode. For details, refer to page 18.*

Notes

- Press  to return to the previous mode.
- Pressing and holding  for at least 2 seconds will return to normal mode.
- If no operation is performed for 60 seconds, the unit will return to normal mode automatically.

SETUP

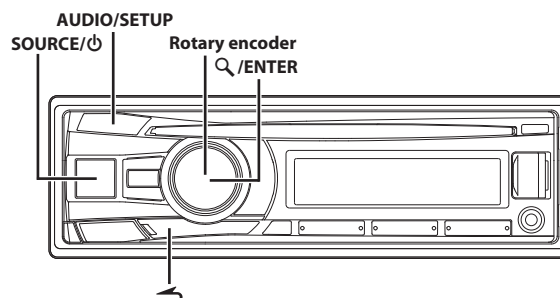

Setting


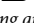
You can flexibly customize the unit to suit your own preferences and usage. From the SETUP menu, GENERAL Setting, DISPLAY Setting, etc., can be modified.

Use steps 1 to 5 to select one of the SETUP modes to modify. See the applicable section below for details about the selected SETUP item.

- 1 Press and hold **AUDIO/SETUP** for at least 2 seconds to activate the **SETUP** mode.
- 2 Turn the **Rotary encoder** to select the desired item, and then press **Q/ENTER**.
(e.g. Select GENERAL)
AUDIO*1 ↔ GENERAL ↔ DISPLAY ↔ iPod*2
GENERAL:
CLOCK ADJ*3 ↔ AUX SETUP*4 ↔ AUX NAME*5 ↔ PLAY MODE
↔ DEMO MODE
DISPLAY:
TEXTSCROLL
iPod:
iPod LIST

*1 Refer to page 12.
*2 CDE-152E/CDE-151E only.
*3 Refer to page 8.
*4 Not displayed when the current source is AUXILIARY.
*5 Displayed only when AUX SETUP is set to ON.
- 3 Turn the **Rotary encoder** to select a setting item, and then press **Q/ENTER**.
(e.g. Select AUX SETUP)
- 4 Turn the **Rotary encoder** to change the setting, and then press **Q/ENTER**.
(e.g. Select AUX ON or AUX OFF)
- 5 Press and hold **AUDIO/SETUP** for at least 2 seconds to return to normal mode.

Notes

- Press  to return to the previous mode.
- Pressing and holding  for at least 2 seconds will return to normal mode.
- If no operation is performed for 60 seconds, the unit will return to normal mode automatically.

General Setting

GENERAL is selected on the setup main menu in step 2.

Setting the AUX SETUP mode

You can input the audio of an external device, (such as a Portable audio player) to the AUX connector of this unit.

Setting item: AUX SETUP


Setting contents:

AUX OFF / AUX ON (Initial setting)

AUX OFF:

When set to OFF, AUX source cannot be selected.

AUX ON:

Set to ON when a portable device is connected. If **SOURCE** /  is pressed and AUX is selected, the sound of the portable device is input to the unit.

Setting the AUX NAME mode

You can change the AUX NAME display in the SETUP mode.

Setting item: AUX NAME

Setting contents:

AUXILIARY (Initial setting) / TV / DVD / PORTABLE / GAME

Note

- PORTABLE is abbreviated as PMD in the display.

Playing MP3/WMA Data (PLAY MODE)

This unit can play back CDs containing both CD and MP3/WMA data (created in Enhanced CD (CD Extra) format). However, in some situations, playback of an enhanced CD may be difficult. In this case, you can choose to play back the CD data session only. When a disc contains both CD and MP3/WMA data, playback starts from the CD data portion of the disc.

Setting item: PLAY MODE

Setting contents:

CD-DA / CDDA/MP3 (Initial setting)

CD-DA:

Only the CD data in Session 1 can be played back.

CDDA/MP3:

CD data, MP3/WMA files in mixed mode, and multi-session discs can be played back.

Note

- Perform this setting before inserting a disc. If a disc has already been inserted, remove it first.

Setting the Demonstration mode

This unit has a demonstration feature for display.

Setting item: DEMO MODE

Setting contents:

ON (Initial setting) / OFF / QUITE OFF

ON:

The unit starts the demonstration if there is no operation for 30 seconds.

OFF:

Quit the demonstration mode. Note that if this unit is disconnected from the vehicle's battery, the next time you use this unit the DEMO mode will be ON.

QUITE OFF:

Quit the demonstration mode completely.

Display Setting

DISPLAY is selected on the setup main menu in step 2.

Scroll Setting (TEXTSCROLL)

This CD player can scroll the disc and track names recorded on CD-TEXT discs, as well as the text information of MP3/WMA files, folder names, and tags.

Setting item: TEXTSCROLL

Setting contents:

SCR MANUAL (Initial setting) / SCR AUTO

SCR MANUAL:

The above information is scrolled only when a disc is loaded, a channel or track is changed, etc.

SCR AUTO:

CD text information, folder and file names, and the tag information are scrolled continuously.

Note

- In parts of the display, scrolling may not occur, or scroll content may differ.

iPod/iPhone Setting

"iPod" is selected on the setup main menu in step 2.

iPod/iPhone Search Mode Setting

The unit allows you to search the iPod/iPhone using nine different search modes.

Setting item: iPod LIST

Further setting items: PLAYLISTS / ARTISTS / ALBUMS / AUDIOBOOKS / PODCASTS / GENRES / COMPOSERS / SONGS / GENIUS MIX


Setting contents:

OFF / ON

Notes

- The search mode for Playlists/Artists/Albums/Podcasts/Genres/ Songs/ Genius Mix is initially set to On. The search mode for Audiobooks/ Composers is initially set to Off.
- For search mode details, refer to page 20.

USB Memory (optional)

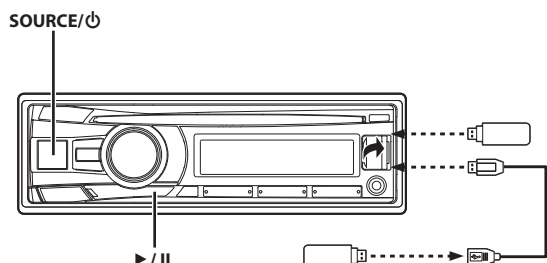

Playing MP3/WMA Files from USB Memory (optional)

If you connect a USB Memory device containing MP3/WMA, the files can be searched and played back.

- 1 Press **SOURCE/⏻** to switch to the USB AUDIO mode.
- 2 To pause playback, press **▶/II**.
Pressing **▶/II** again will resume the playback.

Notes

- This unit plays back files in USB Memory with the same controls and modes used for playback of CDs containing MP3/WMA. For details, refer to page 9.
- Before disconnecting USB Memory, be sure to change to another source or set to pause.
- The playback time may not be correctly displayed when a VBR (Variable Bit Rate) recorded file is played back.

About MP3/WMA File of USB Memory

Playing back MP3/WMA

MP3/WMA files are prepared, then stored to a USB Memory Device. This unit can recognise at most 100 folders and 100 files per folder stored in USB Memory. Playback may not be performed if a USB Memory Device exceeds the limitations described above.
Do not make a file's playback time more than 1 hour.


Media supported

This device can play back files stored on USB Memory devices designed for USB connection.

Corresponding File Systems


This device supports FAT 12/16/32 for USB Memory devices.

iPod/iPhone (optional) (CDE-152E/CDE-151E only)

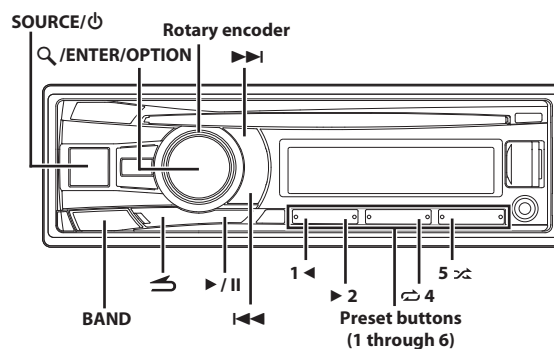

Connecting an iPod/iPhone

An iPod/iPhone can be connected to this unit by using the Interface cable for iPod (included with iPod). When an iPod/iPhone is connected to this unit, you can choose to control the iPod/iPhone using its own controls or by the head unit controls. For details, refer to page 20. These instructions refer to controlling the iPod/iPhone from this Head Unit (HU) only. Make sure iPod Control is set to HU MODE (HEAD UNIT). Refer to page 20. Refer to the iPod/iPhone manual for operations using the iPod/iPhone.

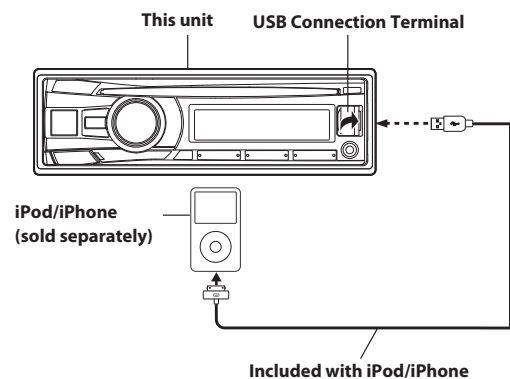

Notes

- An iPhone connected to this unit operates as an iPod.
- Internet and telephone functions of iPod touch or iPhone, etc., can also be used when connecting to the unit. However, using these functions will stop or pause the playing songs. At this time do not operate the unit to avoid a malfunction.

About iPod/iPhone models usable with this unit

- Confirmed devices regarding Made for iPod. Correct function of earlier versions cannot be guaranteed.
 - iPod nano (7th generation): Ver.1.0.2
 - iPod touch (5th generation): Ver.6.1.3
 - iPod touch (4th generation): Ver.6.1.3
 - iPod nano (6th generation): Ver.1.2
 - iPod touch (3rd generation): Ver.5.1.1
 - iPod nano (5th generation): Ver.1.0.2
 - iPod classic (160 GB) (Late 2009): Ver.2.0.4
 - iPod touch (2nd generation): Ver.4.2.1
 - iPod nano (4th generation): Ver.1.0.4
 - iPod classic (120 GB): Ver.2.0.1
 - iPod touch (1st generation): Ver.3.1.3
 - iPod nano (3rd generation): Ver.1.1.3
 - iPod classic (80 GB, 160 GB): Ver.1.1.2
- Confirmed devices regarding Made for iPhone. Correct function of earlier versions cannot be guaranteed.
 - iPhone 5: Ver.6.1.3
 - iPhone 4S: Ver.6.1.3
 - iPhone 4: Ver.6.1.3
 - iPhone 3GS: Ver.6.1.3
 - iPhone 3G: Ver.4.2.1
 - iPhone: Ver.3.1.3
- For clarity in identifying your model of iPod, please see Apple's own document "Identifying iPod models" at <http://support.apple.com/kb/HT1353>
- This unit does not support video playback from iPod/iPhone, even using a video-compatible cable.

Setting the iPod Control

When an iPod/iPhone is connected, operate it from its own controls or from the head unit.

- Press and hold **Q/ENTER/OPTION** for at least 2 seconds in the iPod mode.

The Option menu for iPod mode is activated.

- Turn the Rotary encoder to select "APP DIRECT", and then press **Q/ENTER**.

The iPod control mode will switch between iPod MODE and HU MODE.

HU MODE (HEAD UNIT):

Operate the iPod/iPhone via this unit.

This mode allows you to use M.I.X. play, repeat and music search in an iPod/iPhone from the head unit.

Note

- In HU MODE, if you operate from an iPod/iPhone, the head unit's display and operations may not correspond with those of the iPod/iPhone.

iPod MODE:

Operate the iPod/iPhone using its own controls. When iPod is selected, some functions will not be operable via the head unit.

Notes

- During HU MODE, you can switch to iPod MODE directly by pressing **BAND**.
- Once the control mode is changed, the iPod/iPhone is paused. Press **▶/II** to continue.
- Depending upon the iPod used, iPod control may not be selectable. Or, if iPod is selected, operation must still be from the head unit.

Playback

- Press **SOURCE/⏻** to switch to the iPod mode.
- Press **◀◀** or **▶▶** to select the desired song.
Pressing and holding **◀◀** or **▶▶** will fast backward/fast forward the current track.
- To pause playback, press **▶/II**.
Pressing **▶/II** again will resume playback.

Notes

- A song playing on the iPod/iPhone while it is connected to this unit will continue to play from where it was paused after disconnection.
- If you listen to an episode from a selected Podcast or Audiobook, the episode can be changed by pressing **1 ◀** or **▶ 2**.
- An episode may have several chapters. The chapter can be changed by pressing **◀◀** or **▶▶**.
- During iPod/iPhone playback, press **↶**, and then you can quickly return to the hierarchy level selected last time in the search mode.

Searching for a desired Song

An iPod/iPhone can contain thousands of songs. Use one of the search modes listed below, that you deem most effective in finding a desired song.

Each music category has its own individual hierarchy. Use the Playlist/Artist/Album/Song/Podcast/Genre/Composer/Audiobook/Genius Mix List search mode to narrow searches based on the table below.

Hierarchy 1	Hierarchy 2	Hierarchy 3	Hierarchy 4
Playlist	Song	—	—
Artist*	Album*	Song	—
Album*	Song	—	—
Song	—	—	—
Podcast	Episode	—	—
Genre*	Artist*	Album*	Song
Composer*	Album*	Song	—
Audiobook	—	—	—
Genius Mix List	—	—	—

Note

- You can select your preferred search mode. Refer to page 18.

For example:

Searching by Artist name

The following example explains how an ARTIST search is performed. Another search mode can be used for the same operation, although the hierarchy differs.

- Press **Q/ENTER** to activate the search selection mode.
The "Q" indicator lights up.

- Turn the Rotary encoder to select the ARTIST search mode, and then press **Q/ENTER**.

SHUFFLEALL*1 ↔ PLAYLIST ↔ ARTIST ↔ ALBUM ↔ SONG ↔
PODCAST*2 ↔ GENRE ↔ COMPOSER ↔ AUDIOBOOK ↔
GENIUS MIX*3/*4 ↔ SHUFFLEALL

*1 Shuffle ALL plays all songs in the iPod/iPhone randomly. To cancel shuffle ALL play, press **5** **↶** to select OFF.

*2 Depending on the iPod/iPhone, podcast search is not supported.

*3 Depending on the connected iPod/iPhone, Genius Mix function may not be supported.

*4 When an iPod/iPhone with Genius Mix List created by iTunes is connected to this unit, GENIUS MIX search mode can be used to search a Genius Mix List.

Note

- The display of search mode list varies depending on the setting of iPod LIST. For details, refer to page 18.

- Turn the **Rotary encoder** to select the desired Artist, and then press **Q/ENTER**.
- Turn the **Rotary encoder** to select the desired Album, and then press **Q/ENTER**.
- Turn the **Rotary encoder** to select the desired Song, and then press **Q/ENTER**.

Notes

- After pressing and holding **Q/ENTER** for at least 2 seconds while in each hierarchy (except Song, Audiobook and Genius Mix List), all songs of the selected hierarchy are played back.
- Playback [ALL] is only applicable for those categories marked with "*", (refer to the table on the left) press and hold **Q/ENTER** for at least 2 seconds to play back all songs in the iPod/iPhone or selected search mode.
- While in the search mode, if you press and hold **↵** for 2 seconds, or no operation is performed for 10 seconds, the search mode is cancelled.
- In the search mode, pressing **↵** will return to the previous mode.
- When search is made during M.I.X. play, the M.I.X. play mode will be cancelled.
- "NO SONG" will be displayed if there are no songs in the selected playlist in the PLAYLIST search mode.
- "NO PODCAST" will be displayed if there is no podcast data in the iPod/iPhone in the PODCAST search mode.
- "NO AUDIOBOOK" will be displayed if there is no audiobook data in the iPod/iPhone in AUDIOBOOK search mode.
- "NO GENIUS" will be displayed if there is no genius mix list data in the GENIUS MIX search mode.
- If "iPod name" stored in the iPod/iPhone is selected in the desired Playlist search mode, and **Q/ENTER** is pressed, you can search for all songs in the iPod/iPhone. Also, if you press and hold **Q/ENTER** for at least 2 seconds, all songs in the iPod/iPhone are played back.
- Press any of the **preset buttons (1 through 6)** during a search to skip over a calculated percentage of songs. For details, refer to page 21.

Direct Search Function

The unit's direct search function can be used to search for an album, song, etc., more efficiently. In PLAYLIST/ARTIST/ALBUM/SONG/PODCAST/GENRE/COMPOSER/AUDIOBOOK mode, you can quickly target any song.

In the search mode, press any one of the preset buttons (1 through 6) to quickly skip over a designated percent of your song content.

Song search example:

If there are 100 songs in your iPod/iPhone, they are divided into 6 groups using percentages (shown below). These groups are assigned to the preset buttons (1 through 6).

Example 1:

Suppose the song you are searching for is located at around the middle (50%) of your library: press button 4 to jump to the 50th song and turn the **Rotary encoder** to find the desired song.

Example 2:

Suppose the song you are searching for is located near the end (83%) of your library: press button 6 to jump to the 83rd song and turn the **Rotary encoder** to find the desired song.

	All 100 songs (100%)					
	0%	17%	33%	50%	67%	83%
Preset buttons	1	2	3	4	5	6
Songs	1st song	17th song	33rd song	50th song	67th song	83rd song

Note

- This function is also applicable to CD/MP3/WMA search.

Select Playlist/Artist/Album/Genre/Composer

Playlist/Artist/Album/Genre/Composer can be easily changed. For example, if you listen to a song from a selected album, the album can be changed.

Press 1 ◀ or ▶ 2 to select the desired Playlist/Artist/Album/Genre/Composer.

Notes

- If the song search mode was used to select a song, this function is inactive.
- If an album is selected during an artist search, other albums by that artist are searchable.
- This function is inactive during shuffle (**↺**) playback.

Repeat and Random Play

- During playback, press **↺** 4 or 5 **↺** repeatedly until the setting appears.

RPT ONE **↺**:

Track/file is played back repeatedly.

MIX Albums **↺** **↺**:

The songs on each album are played back in proper order. Upon completion of all the songs on the album, the next album is selected randomly.

MIX Songs **↺** **↺**:

Song shuffle randomly plays back songs within a selected category (playlist, album, etc.).

- To cancel repeat or M.I.X. play, select (off) with the above procedure.

Notes

- If a song is selected in the album search mode before selecting M.I.X. play, the songs will not play back randomly even when Shuffle Albums is selected.
- Depending on the connected iPod, track up/down may be not available during Repeat play.
- Shuffle ALL mode can be selected in "Searching for a desired Song" (page 20). If Shuffle ALL is selected, the selected songs being played back in the search mode are cancelled and the **↺** indicator lights up.

Information

In Case of Difficulty

If you encounter a problem, please turn the power off, then on again. If the unit is still not functioning normally, please review the items in the following checklist. This guide will help you isolate the problem if the unit is at fault. Otherwise, make sure the rest of your system is properly connected or consult your authorized Alpine dealer.

Basic

No function or display.

- Vehicle's ignition is off.
 - If connected following instructions, the unit will not operate with the vehicle's ignition off.
- Improper power lead (Red) and battery lead (Yellow) connections.
 - Check power lead and battery lead connections.
- Blown fuse.
 - Check the fuse of the unit; replace with the proper value if necessary.

Radio

Unable to receive stations.

- No antenna or open connection in cable.
 - Make sure the antenna is properly connected; replace the antenna or cable if necessary.

Unable to tune stations in the seek mode.

- You are in a weak signal area.
 - Make sure the tuner is in the DX mode.
- If the area you are in is a primary signal area, the antenna may not be grounded and connected properly.
 - Check your antenna connections; make sure the antenna is properly grounded at its mounting location.
- The antenna may not be the proper length.
 - Make sure the antenna is fully extended; if broken, replace the antenna with a new one.

Broadcast is noisy.

- The antenna is not the proper length.
 - Extend the antenna fully; replace it if it is broken.
- The antenna is poorly grounded.
 - Make sure the antenna is grounded properly at its mounting location.

CD

CD Player not functioning.

- Out of operating temperature range +50°C (+120°F) for CD.
 - Allow the vehicle's interior (or trunk) temperature to cool.

CD playback sound is wavering.

- Moisture condensation in the CD Module.
 - Allow enough time for the condensation to evaporate (about 1 hour).

CD insertion not possible.

- A CD is already in the CD player.
 - Eject the CD and remove it.
- The CD is being improperly inserted.
 - Make sure the CD is being inserted following instructions in the CD Player Operation section.

Unable to fast forward or backward the CD.

- The CD has been damaged.
 - Eject the CD and discard it; using a damaged CD in your unit can cause damage to the mechanism.


CD playback sound skips due to vibration.

- Improper mounting of the unit.
 - Securely re-mount the unit.
- The disc is very dirty.
 - Clean the disc.
- The disc has scratches.
 - Change the disc.
- The pick-up lens is dirty.
 - Do not use a commercially available lens cleaner disc. Consult your nearest Alpine dealer.

CD playback sound skips without vibration.

- The disc is dirty or scratched.
 - Clean the disc; damaged disc should be replaced.

Error displays (built-in CD player only).

- Mechanical error
 - Press . After the error indication disappears, insert the disc again. If the above-mentioned solution does not solve the problem, consult your nearest Alpine dealer.

CD-R/CD-RW playback not possible.

- Close session (finalisation) has not been performed.
 - Perform finalisation and attempt playback again.

MP3/WMA

MP3/WMA is not played back.

- Writing error occurred. The MP3/WMA format is not compatible.
 - Make sure the MP3/WMA has been written in a supported format. Refer to page 10, and then rewrite in the format supported by this device.

Audio

The sound is not output from the speakers.

- Unit has no output signal of the internal amplifier.
 - POWER IC is switched to "ON"; refer to page 14.


iPod (CDE-152E/CDE-151E only)

iPod does not play and no sound is output.




- The iPod has not been recognised.
 - Reset the iPod.

Indication for CD Player

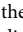NO DISC

- No CD is inserted.
 - Insert a CD.
- Although a disc is inserted, "NO DISC" is displayed and the unit does not start to play or eject the disc.
 - Remove the disc by following these steps:
 - Press the  button again for at least 2 seconds.
 - If the disc still does not eject, consult your Alpine dealer.

ERROR

- Mechanism error.
 - 1 Press the  button and eject the CD.
If not ejecting, consult your Alpine dealer.
 - 2 When the error indication remains after ejecting, press the  button again.
If the error indication still does not turn off after pressing the  button for a few times, consult your Alpine dealer.

PROTECT

- A copy-protected WMA file was played back.
 - You can only play back non-copy-protected files.

UNSUPPORTED

- A sampling rate/bit rate not supported by the unit is used.
 - Use a sampling rate/bit rate that is supported by the unit.

NO SUPPORT

- An AAC format disc is inserted.
 - Change to a disc of a supported format.

Indication for USB Memory

DEVICE ERR

- A USB device that is not supported by the unit is connected.
 - Connect a USB device that is supported by the unit.

NO DEVICE

- A USB Memory Device is not connected.
 - Make sure the USB Memory device is correctly connected and the cable is not excessively bent.

NO FILE

- No MP3/WMA (file) is stored in the USB Memory.
 - Connect the USB Memory device after storing songs (files).

PROTECT

- A copy-protected WMA file was played back.
 - You can only play back non-copy-protected files.

UNSUPPORTED

- A sampling rate/bit rate not supported by the unit is used.
 - Use a sampling rate/bit rate that is supported by the unit.

NO SUPPORT

- Text information that is not recognisable by the unit has been input.
 - Use a USB Memory device with input text information that is supported by the unit.

ERROR

- Communication error or others
 - Change to other source.
 - Turn the power off.
 - Turn the ignition key off, and then set to ON again.

ERROR-01

- Communication error
 - Turn the ignition key off, and then set to ON again.
 - Check the display by reconnecting between the USB Memory and this unit.

ERROR-04

- Power surge error
Excessive voltage/current is supplied to the USB Memory.
 - Try another USB Memory, if available.

Indication for iPod Mode (CDE-152E/CDE-151E only)

NO DEVICE

- The iPod/iPhone is not connected.
 - Make sure the iPod/iPhone is correctly connected.
Make sure the cable is not bent excessively.

NO SONG

- There are no songs in the iPod/iPhone.
 - Download songs to the iPod/iPhone and connect to this unit.

ERROR-01

- Communication error
 - Turn the ignition key off, and then set to ON again.
 - Check the display by reconnecting between the iPod/iPhone and this unit, using the iPod/iPhone cable.

ERROR-02

- Caused by the iPod/iPhone Software Version not being compatible with this unit.
 - Update the iPod/iPhone Software Version to be compatible with this unit.

ERROR-03

- The iPod/iPhone is not verified.
 - Reset the iPod.
 - Try another iPod/iPhone, if available.

ERROR-04

- Power surge error
Excessive voltage/current is supplied to the iPod/iPhone.
 - Try another iPod/iPhone, if available.
 - Turn the power off.
 - Turn the ignition key off, and then set to ON again.

- iPhone, iPod, iPod classic, iPod nano, and iPod touch are trademarks of Apple Inc., registered in the U.S. and other countries.
- “Made for iPod,” and “Made for iPhone,” mean that an electronic accessory has been designed to connect specifically to iPod, or iPhone, respectively, and has been certified by the developer to meet Apple performance standards. Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards. Please note that the use of this accessory with iPod, or iPhone may affect wireless performance.
- Windows Media and the Windows logo are trademarks, or registered trademarks of Microsoft Corporation in the United States and/or other countries.
- MPEG Layer-3 audio coding technology licensed from Fraunhofer IIS and Thomson. Supply of this product only conveys a licence for private, non-commercial use and does not convey a licence nor imply any right to use this product in any commercial (i.e. revenue-generation) real time broadcasting (terrestrial, satellite, cable and/or any other media), broadcasting/streaming via internet, intranets and/or other networks or in other electronic content distribution systems, such as pay-audio or audio-on-demand applications. An independent licence for such use is required. For details, please visit <http://www.mp3licensing.com>

Specifications**FM TUNER SECTION**

Tuning Range	87.5 ~ 108.0 MHz
Mono Usable Sensitivity	9.3 dBf (0.8 μ V/75 ohms)
Alternate Channel Selectivity	80 dB
Signal-to-Noise Ratio	65 dB
Stereo Separation	35 dB
Capture Ratio	2.0 dB

AM TUNER SECTION

Tuning Range	531 ~ 1,602 kHz
Sensitivity (IEC Standard)	22.5 μ V/27 dB

CD PLAYER SECTION

Frequency Response	5 ~ 20,000 Hz (\pm 1 dB)
Wow & Flutter (% WRMS)	Below measurable limits
Total Harmonic Distortion	0.008% (at 1 kHz)
Dynamic Range	95 dB (at 1 kHz)
Signal-to-Noise Ratio	105 dB
Channel Separation	85 dB (at 1 kHz)

USB SECTION

USB requirements	USB 1.1/2.0
Max. Power Consumption	1,000 mA
USB Class	Mass Storage
File System	FAT 12/16/32
MP3 Decoding	MPEG AUDIO Layer-3
WMA Decoding	Windows Media TM Audio

PICKUP

Wave length	795 nm
Laser power	CLASS I

GENERAL

Power Requirement	14.4 V DC (11 ~ 16 V allowable)
Power Output	50 W \times 4
Maximum Pre-Output Voltage	2 V/10 k ohms
Bass	\pm 14 dB at 100 Hz
Mid	\pm 14 dB at 1 kHz
Treble	\pm 14 dB at 10 kHz
Loudness	10 dB at 100 Hz
Weight	1.24 kg (2 lbs. 11 oz)

CHASSIS SIZE

Width	178 mm (7")
Height	50 mm (2")
Depth	160.5 mm (6-5/16")

NOSEPIECE SIZE

Width	170 mm (6-3/4")
Height	46 mm (1-13/16")
Depth	25 mm (1")

Note

- Due to continuous product improvement, specifications and design are subject to change without notice.

Installation and Connections

Before installing or connecting the unit, please read the following and refer to page 4 for proper use.

WARNING

MAKE THE CORRECT CONNECTIONS.

Failure to make the proper connections may result in fire or product damage.

USE ONLY IN CARS WITH A 12 VOLT NEGATIVE GROUND.

(Check with your dealer if you are not sure.) Failure to do so may result in fire, etc.

BEFORE WIRING, DISCONNECT THE CABLE FROM THE NEGATIVE BATTERY TERMINAL.

Failure to do so may result in electric shock or injury due to electrical shorts.

DO NOT SPLICE INTO ELECTRICAL CABLES.

Never cut away cable insulation to supply power to other equipment. Doing so will exceed the current carrying capacity of the wire and result in fire or electric shock.

DO NOT DAMAGE PIPE OR WIRING WHEN DRILLING HOLES.

When drilling holes in the chassis for installation, take precautions so as not to contact, damage or obstruct pipes, fuel lines, tanks or electrical wiring. Failure to take such precautions may result in fire.

DO NOT USE BOLTS OR NUTS IN THE BRAKE OR STEERING SYSTEMS TO MAKE GROUND CONNECTIONS.

Bolts or nuts used for the brake or steering systems (or any other safety-related system), or tanks should NEVER be used for installations or ground connections. Using such parts could disable control of the vehicle and cause fire etc.

KEEP SMALL OBJECTS SUCH AS BATTERIES OUT OF THE REACH OF CHILDREN.

Swallowing them may result in serious injury. If swallowed, consult a physician immediately.

DO NOT INSTALL IN LOCATIONS WHICH MIGHT HINDER VEHICLE OPERATION, SUCH AS THE STEERING WHEEL OR SHIFT LEVER.

Doing so may obstruct forward vision or hamper movement etc. and results in serious accident.

DO NOT ALLOW CABLES TO BECOME ENTANGLED IN SURROUNDING OBJECTS.

Arrange wiring and cables in compliance with the manual to prevent obstructions when driving. Cables or wiring that obstruct or hang up on places such as the steering wheel, shift lever, brake pedals, etc. can be extremely hazardous.

CAUTION

HAVE THE WIRING AND INSTALLATION DONE BY EXPERTS.

The wiring and installation of this unit requires special technical skill and experience. To ensure safety, always contact the dealer where you purchased this product to have the work done.

USE SPECIFIED ACCESSORY PARTS AND INSTALL THEM SECURELY.

Be sure to use only the specified accessory parts. Use of other than designated parts may damage this unit internally or may not securely install the unit in place. This may cause parts to become loose resulting in hazards or product failure.

ARRANGE THE WIRING SO IT IS NOT CRIMPED OR PINCHED BY A SHARP METAL EDGE.

Route the cables and wiring away from moving parts (like the seat rails) or sharp or pointed edges. This will prevent crimping and damage to the wiring. If wiring passes through a hole in metal, use a rubber grommet to prevent the wire's insulation from being cut by the metal edge of the hole.

DO NOT INSTALL IN LOCATIONS WITH HIGH MOISTURE OR DUST.

Avoid installing the unit in locations with high incidence of moisture or dust. Moisture or dust that penetrates into this unit may result in product failure.

PRECAUTIONS

- Be sure to disconnect the cable from the (–) battery post before installing your CDE-152E/CDE-151E/CDE-150E. This will reduce any chance of damage to the unit in case of a short-circuit.
- Be sure to connect the colour coded leads according to the diagram. Incorrect connections may cause the unit to malfunction or damage to the vehicle's electrical system.
- When making connections to the vehicle's electrical system, be aware of the factory installed components (e.g. on-board computer). Do not tap into these leads to provide power for this unit. When connecting the CDE-152E/CDE-151E/CDE-150E to the fuse box, make sure the fuse for the intended circuit of the CDE-152E/CDE-151E/CDE-150E has the appropriate amperage. Failure to do so may result in damage to the unit and/or the vehicle. When in doubt, consult your Alpine dealer.
- The CDE-152E/CDE-151E/CDE-150E uses female RCA-type jacks for connection to other units (e.g. amplifier) having RCA connectors. You may need an adaptor to connect other units. If so, please contact your authorized Alpine dealer for assistance.
- Be sure to connect the speaker (–) leads to the speaker (–) terminal. Never connect left and right channel speaker cables to each other or to the vehicle body.

IMPORTANT

Please record the serial number of your unit in the space provided below and keep it as a permanent record. The serial number or the engraved serial number is located on the bottom of the unit.

SERIAL NUMBER: []
INSTALLATION DATE: []
INSTALLATION TECHNICIAN: []
PLACE OF PURCHASE: []

Installation

To prevent external noise from entering the audio system.


- Locate the unit and route the leads at least 10 cm away from the car harness.
- Keep the battery power leads as far away from other leads as possible.
- Connect the ground lead securely to a bare metal spot (remove any paint, dirt or grease if necessary) of the car chassis.
- If you add an optional noise suppressor, connect it as far away from the unit as possible. Your Alpine dealer carries various noise suppressors, contact them for further information.
- Your Alpine dealer knows best about noise prevention measures so consult your dealer for further information.

CAUTION


When you install this unit in your car, do not remove the detachable front panel.

If the detachable front panel is removed during installation, you might press too hard and warp the metal plate that holds it in place.

The main unit must be mounted within 35 degrees of the horizontal plane, back to front.

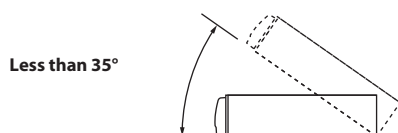


- 1 Remove the mounting sleeve from the main unit (refer to page 26).

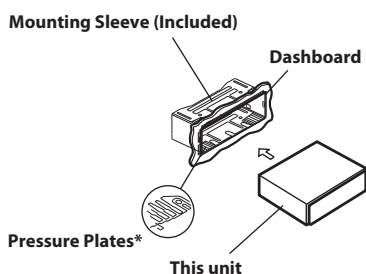

* If the installed mounting sleeve is loose in the dashboard, the pressure plates may be bent slightly to remedy the problem.

- 2 Reinforce the head unit with the metal mounting strap (not supplied). Secure the ground lead of the unit to a clean metal spot.

Connect each input lead coming from an amplifier to the corresponding output lead coming from the left rear of the CDE-152E/CDE-151E/CDE-150E. Connect all other leads of the CDE-152E/CDE-151E/CDE-150E according to details described in the CONNECTIONS section.

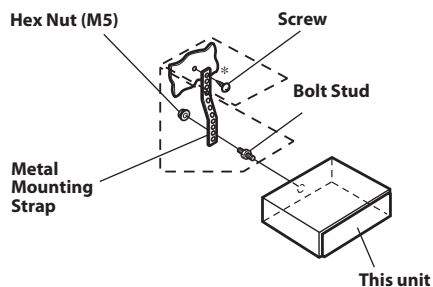


Note

- For the screw marked "a", use an appropriate screw for the chosen mounting location.

- 3 Slide the CDE-152E/CDE-151E/CDE-150E into the dashboard until it clicks. This ensures that the unit is properly locked and will not accidentally come out from the dashboard. Install the detachable front panel.



Removal

- 1 Remove the detachable front panel.
- 2 Insert the bracket keys into the unit, along the guides on either side. The unit can now be removed from the mounting sleeve.

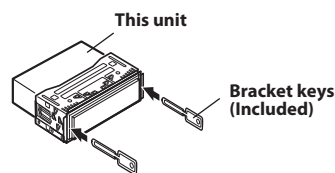

- 3 Pull the unit out, keeping it unlocked as you do so.

 JAPANESE CAR

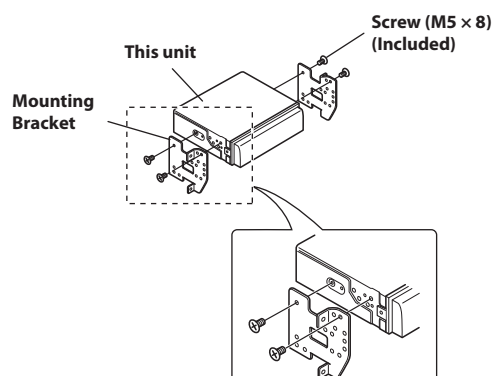

⚠ CAUTION

Make the correct connections.

Failure to make the proper connections may result in fire or product damage. If there is an unused line, please cover insulating tape.

① Power Antenna Lead (Blue)

Connect this lead to the +B terminal of your power antenna, if applicable.

Note

- *This lead should be used only for controlling the vehicle's power antenna. Do not use this lead to turn on an amplifier or a signal processor, etc.*

② Remote Turn-On Lead (Blue/White)

Connect this lead to the remote turn-on lead of your amplifier or signal processor.

③ Illumination Lead (Orange)

Not used for this unit.

④ Switched Power Lead (Ignition) (Red)

Connect this lead to an open terminal on the vehicle's fuse box or another unused power source which provides (+) 12V only when the ignition is turned on or in the accessory position.

⑤ Battery Lead (Yellow)

Connect this lead to the positive (+) post of the vehicle's battery.

⑥ Ground Lead (Black)

Connect this lead to a good chassis ground on the vehicle. Make sure the connection is made to bare metal and is securely fastened using the sheet metal screw provided.

⑦ Right Front (+) Speaker Output Lead (Grey)

⑧ Right Front (–) Speaker Output Lead (Grey/Black)

⑨ Right Rear (–) Speaker Output Lead (Violet/Black)

⑩ Right Rear (+) Speaker Output Lead (Violet)

⑪ Left Rear (+) Speaker Output Lead (Green)

⑫ Left Rear (–) Speaker Output Lead (Green/Black)

⑬ Left Front (–) Speaker Output Lead (White/Black)

⑭ Left Front (+) Speaker Output Lead (White)

⑮ Antenna Receptacle

⑯ Front Output RCA Connectors (CDE-152E only)

RED is right and WHITE is left.

⑰ Rear Output RCA Connectors (CDE-152E only)

RED is right and WHITE is left.

⑱ Front Output RCA Connectors (CDE-151E/CDE-150E only)

RED is right and WHITE is left.

⑲ Subwoofer Output RCA Connectors (CDE-152E only)

⑳ Rear/Subwoofer Output RCA Connectors (CDE-151E/CDE-150E only)

RED is right and WHITE is left.

㉑ Fuse Holder (10A)

㉒ Power Supply Connector

㉓ RCA Extension Cable (sold separately)

㉔ USB Terminal

Connect this to a USB Memory or an iPod/iPhone (sold separately).

㉕ Front AUX Input Terminal

This terminal allows for input of audio from an external device (such as a portable player), using a commercially-available converter cable.

สารบัญ / Isi

คำเตือน / PERINGATAN	2
ข้อควรระวัง / PERHATIAN	3
เริ่มต้นใช้งาน / Memulai.....	4
ฟังก์ชัน BASS ENGINE SQ / Fungsi BASS ENGINE SQ	4
วิทยุ / Radio.....	5
CD/MP3/WMA	6
แฟลชไดรฟ์ USB (อุปกรณ์เสริม) / Memori USB (Opsional)	7
iPod/iPhone (อุปกรณ์เสริม) (CDE-152E/CDE-151E เท่านั้น) / iPod/iPhone (Opsional) (CDE-152E/CDE-151E saja).....	8
การตั้งเวลา / Mengatur Waktu	10
ข้อมูลจำเพาะ / Spesifikasi	11
การติดตั้ง / Pemasangan.....	12
การเชื่อมต่อ / Sambungan	13

! คำเตือน

สัญลักษณ์หมายถึงคำแนะนำที่สำคัญ การละเลยไม่ปฏิบัติตามคำแนะนำนี้อาจเป็นสาเหตุให้ได้รับบาดเจ็บสาหัสหรือถึงแก่ชีวิต

ห้ามใช้งานฟังก์ชันใด ๆ ที่เบี่ยงเบนความสนใจของท่านจากการขับอย่างปลอดภัย ท่านควรใช้งานฟังก์ชันที่ต้องการความสนใจของท่านเป็นเวลานานหลังจากจอดแล้ว โปรดจอดรถในสถานที่ที่ปลอดภัยก่อนใช้งานฟังก์ชันดังกล่าว การละเลยไม่ปฏิบัติตามอาจเป็นสาเหตุของอุบัติเหตุ

โปรดปรับระดับความดังของเสียงให้อยู่ในระดับที่ท่านยังคงได้ยินเสียงจากภายนอกในขณะที่ขับ

ระดับเสียงที่สูงเกินไปจะกลบเสียงสัญญาณฉุกเฉินของรถหรือเสียงสัญญาณเตือนทางจราจร (เสียงสัญญาณข้ามทางรถไฟ ฯลฯ) และเป็นอันตรายซึ่งอาจเป็นสาเหตุของอุบัติเหตุได้ นอกจากนี้ การรับฟังเสียงที่สูงเกินไปภายในรถอาจเป็นสาเหตุของความเสียหายของประสาทสัมผัสการรับฟัง

ห้ามถอดแยกชิ้นส่วนหรือดัดแปลงใด ๆ

การกระทำดังกล่าวอาจเป็นสาเหตุของอุบัติเหตุ, เพลิงไหม้ หรือไฟฟ้าช็อต

ใช้กับรถยนต์ที่มีควรวินไฟลบขนาด 12 โวลต์เท่านั้น

(หากท่านไม่แน่ใจ โปรดสอบถามจากผู้แทนจำหน่ายรถยนต์ของท่าน) การละเลยไม่ปฏิบัติตามอาจเป็นสาเหตุของเพลิงไหม้

เก็บสิ่งของขนาดเล็ก เช่น แบตเตอรี่ให้ห่างจากมือเด็ก

การกลืนเข้าไปจะทำให้ได้รับบาดเจ็บสาหัส ถ้าเมล็ดกลืนเข้าไป ให้รีบไปพบแพทย์ทันที

เมื่อต้องเปลี่ยนฟิวส์ ให้ใช้ฟิวส์ซึ่งมีขนาดแอมแปร์ถูกต้อง

การละเลยไม่ปฏิบัติตามอาจเป็นสาเหตุของเพลิงไหม้ หรือไฟฟ้าช็อต

ห้ามวางสิ่งของกีดขวางช่องระบายอากาศหรือแผงหม้อน้ำ

การกระทำดังกล่าวอาจเป็นสาเหตุทำให้ความร้อนสะสมอยู่ภายในและเป็นสาเหตุของเพลิงไหม้

ใช้ผลิตภัณฑ์ที่กับการใช้งานที่ต้องการไฟ 12 โวลต์เท่านั้น

การใช้งานนอกเหนือจากที่ออกแบบไว้อาจเป็นสาเหตุของเพลิงไหม้, ไฟฟ้าช็อต หรือการบาดเจ็บได้

ห้ามสอดมือ, นิ้วมือ หรือสิ่งแปลกปลอมเข้าไปในช่องต่อหรือช่องว่างต่าง ๆ

การกระทำดังกล่าวอาจส่งผลให้ได้รับบาดเจ็บหรือความเสียหายต่อตัวผลิตภัณฑ์

ทำการเชื่อมต่ออย่างถูกต้อง

การเชื่อมต่อไม่ถูกต้องอาจเป็นสาเหตุของเพลิงไหม้หรือความเสียหายของผลิตภัณฑ์

ก่อนเดินสาย ให้ถอดสายแบตเตอรี่ออกจากขั้วลบของแบตเตอรี่

การละเลยไม่ปฏิบัติตาม อาจเป็นสาเหตุของไฟฟ้าลัดวงจรหรือการบาดเจ็บเนื่องจากไฟฟ้าช็อต

ห้ามกรีดลอกสายไฟ

ห้ามกรีดลอกขมวดหุ้มสายไฟเพื่อจ่ายไฟให้กับอุปกรณ์อื่น การกระทำดังกล่าวจะทำให้ปริมาณของกระแสไฟฟ้ามากเกินไปกว่าที่สายไฟจะรับได้และเป็นสาเหตุของเพลิงไหม้หรือไฟฟ้าช็อต

ห้ามทำให้อุณหภูมิหรือสายไฟได้รับความเสียหายในขณะเจาะรู

เมื่อเจาะรูสำหรับการติดตั้งที่แชสซิส โปรดใช้ความระมัดระวังไม่ให้โดน, ทำความเสียหาย หรือ กีดขวางท่อ, ท่อน้ำมัน, ถังน้ำมัน หรือสายไฟ การละเลยไม่ปฏิบัติตามข้อควรระวังดังกล่าวอาจเป็นสาเหตุของเพลิงไหม้

ห้ามใช้โบลต์หรือสกรูในชุดเบรกหรือระบบบังคับเลี้ยวเพื่อเชื่อมต่อกราวด์

ห้ามนำโบลต์หรือสกรูที่ใช้สำหรับชุดเบรกหรือระบบบังคับเลี้ยว (หรือระบบที่เกี่ยวข้องกับความปลอดภัยอื่น ๆ) หรือนำมัน ไปใช้กับการติดตั้งหรือการเชื่อมต่อกราวด์โดยเด็ดขาด การใช้งานชิ้นส่วนดังกล่าวอาจเป็นสาเหตุให้สูญเสียการควบคุมรถและเพลิงไหม้ ฯลฯ

ห้ามติดตั้งในตำแหน่งที่อาจกีดขวางการใช้งานรถ เช่น พวงมาลัย หรือคันเกียร์

การกระทำดังกล่าวอาจบดบังทัศนวิสัยด้านหน้าหรือกีดขวางการเคลื่อนที่ ฯลฯ และเป็นสาเหตุของอุบัติเหตุร้ายแรง

! PERINGATAN

Symbol ini menandakan petunjuk penting. Jika tidak dipatuhi dapat mengakibatkan cedera parah atau kematian.

JANGAN OPERASIKAN FUNGSI APA PUN YANG AKAN MENGALIHKAN PERHATIAN ANDA DARI MENGEMUDIKAN KENDARAAN SECARA AMAN.

Setiap fungsi yang memerlukan perhatian Anda dalam waktu lama hanya boleh dilakukan setelah berhenti sepenuhnya. Selalu hentikan kendaraan di lokasi yang aman sebelum menjalankan fungsi-fungsi ini. Jika tidak dilakukan dapat mengakibatkan kecelakaan.

PERTAHANKAN VOLUME DI LEVEL DI MANA ANDA MASIH DAPAT MENDENGAR SUARA LUAR SAAT MENGEMUDI.

Level volume terlalu tinggi yang menghalangi suara seperti sirine kendaraan darurat atau sinyal peringatan jalan (perlintasan kereta, dll.) berbahaya dan dapat mengakibatkan kecelakaan. MENDENGARKAN PADA LEVEL VOLUME KERAS DI DALAM MOBIL JUGA DAPAT MENYEBABKAN GANGGUAN PENDENGARAN.

JANGAN BONGKAR ATAU UBAH UNIT.

Jika dilakukan dapat mengakibatkan kecelakaan, kebakaran, atau sengatan listrik.

GUNAKAN HANYA DI DALAM MOBIL DENGAN GROUND NEGATIF 12 VOLT.

(Tanyakan pada dealer jika Anda tidak yakin.) Jika tidak dilakukan dapat mengakibatkan kebakaran, dll.

JAUHKAN KOMPONEN KECIL SEPerti BATERAI DI LUAR JANGKAUAN ANAK-ANAK.

Seandainya tertelan dapat mengakibatkan cedera parah. Jika tertelan, segera periksakan ke dokter.

GUNAKAN RATING AMPERE YANG BENAR APABILA MENGGANTI SEKERING.

Jika tidak dilakukan dapat mengakibatkan kebakaran atau sengatan listrik.

JANGAN HALANGI VENTILASI ATAU PANEL RADIATOR.

Jika dilakukan dapat menyebabkan panas terjebak di dalam dan dapat mengakibatkan kebakaran.

GUNAKAN PRODUK INI UNTUK APLIKASI SELULER 12V.

Penggunaan untuk aplikasi selain yang dirancang dapat mengakibatkan kebakaran, sengatan listrik, atau cedera lainnya.

JANGAN MASUKKAN TANGAN, JARI, ATAU BENDA ASING KE DALAM SLOT MASUK ATAU CELAH.

Jika dilakukan dapat mengakibatkan cedera atau kerusakan pada produk.

SAMBUNGAN DENGAN BENAR.

Jika tidak disambungkan dengan benar dapat mengakibatkan kebakaran atau kerusakan produk.

SEBELUM MERANGKAI, LEPASKAN KABEL DARI TERMINAL NEGATIF BATERAI.

Jika tidak dilakukan dapat mengakibatkan sengatan listrik atau cedera karena hubungan singkat.

JANGAN MEMINTAS KABEL LISTRIK.

Jangan pernah memotong isolasi kabel untuk mencatu daya ke peralatan lain.

Jika dilakukan dapat melebihi kapasitas pengaliran arus kabel dan mengakibatkan kebakaran atau sengatan listrik.

JANGAN SAMPAI MERUSAK PIPA ATAU RANGKAIAN SAAT MENGEBOR LUBANG.

Ketika mengebor lubang pada chassis untuk pemasangan, berhati-hatilah agar tidak menyentuh, merusak, atau menghalangi pipa, saluran bahan bakar, tangki, atau rangkaian listrik. Mengabaikan tindakan pencegahan ini dapat mengakibatkan kebakaran.

JANGAN GUNAKAN BAUT ATAU MUR PADA SISTEM REM ATAU KEMUDI UNTUK MEMBUAT SAMBUNGAN GROUND.

Baut atau mur yang digunakan untuk sistem rem atau kemudi (atau sistem terkait keselamatan lainnya), atau tangki TIDAK BOLEH digunakan untuk pemasangan atau sambungan ground. Menggunakan komponen tersebut dapat menonaktifkan kontrol kendaraan dan menyebabkan kebakaran, dll.

JANGAN PASANG DI LOKASI YANG MUNGKIN MENGHAMBAT PENGOPERASIAN KENDARAAN, SEPerti RODA KEMUDI ATAU TUAS PERSNELING.

Jika dilakukan dapat menghalangi pandangan ke depan atau menghambat gerakan, dll. dan mengakibatkan kecelakaan parah.

! ข้อควรระวัง

สัญลักษณ์นี้หมายถึงคำแนะนำที่สำคัญ การละเลยไม่ปฏิบัติตามคำแนะนำนี้อาจเป็นสาเหตุให้ได้รับบาดเจ็บสาหัสหรือทรัพย์สินเสียหาย

หยุดการใช้งานทันทีถ้าเกิดความผิดปกติขึ้น

การเดินสายไฟไม่ปฏิบัติตามอาจเป็นสาเหตุของการได้รับบาดเจ็บหรือความเสียหายของผลิตภัณฑ์ หากมีความผิดปกติ กรุณาส่งเครื่องกลับไปที่ผู้แทนจำหน่ายอย่างเป็นทางการของ Alpine หรือศูนย์บริการของ Alpine ที่ใกล้ที่สุดเพื่อทำการซ่อมแซม

โปรดมอบหมายหน้าที่ในการเดินสายไฟและติดตั้งแก่ช่างผู้เชี่ยวชาญ

การเดินสายไฟและการติดตั้งผลิตภัณฑ์นี้ต้องการทักษะทางเทคนิคพิเศษและประสบการณ์ เพื่อความปลอดภัย โปรดติดต่อกับผู้แทนจำหน่ายที่ท่านซื้อผลิตภัณฑ์นี้เพื่อมอบหมายให้ดำเนินการตามดังกล่าว

ใช้ชิ้นส่วนเสริมที่กำหนดไว้และติดตั้งชิ้นส่วนดังกล่าวให้แน่นหนา

ต้องใช้เฉพาะชิ้นส่วนเสริมที่กำหนดไว้เท่านั้น การใช้ชิ้นส่วนอื่นที่ไม่ได้กำหนดไว้อาจก่อให้เกิดความเสียหายภายในตัวเครื่อง หรืออาจทำให้ตัวเครื่องติดตั้งไม่แน่นหนา ซึ่งอาจเป็นสาเหตุที่ทำให้ชิ้นส่วนหลวม และส่งผลให้เกิดอันตรายต่อตัวผลิตภัณฑ์หรือการทำงานผิดปกติ

จัดวางสายไฟโดยระวังไม่ให้สายไฟบิดเบี้ยวหรือถูกขอบโลหะคมกดทับ

เดินสายสัญญาณและสายไฟให้ห่างจากชิ้นส่วนที่เคลื่อนที่ได้ (เช่น รางปรับเบาะนั่ง) หรือขอบชิ้นส่วนที่คมหรือมีปลายแหลม วิธีการนี้จะช่วยป้องกันสายไฟบิดเบี้ยวหรือความเสียหาย ถ้าเดินสายไฟลอดผ่านรูในชิ้นส่วนโลหะ ให้ใช้ปลอกยางเพื่อป้องกันฉนวนหุ้มสายไฟถูกขอบโลหะของรูดังกล่าวกรีดขาด

ห้ามติดตั้งในสถานที่ที่มีความชื้นสูงหรือมีฝุ่นฟุ้งกระจาย

หลีกเลี่ยงการติดตั้งเครื่องในสถานที่ที่มีความชื้นสูงหรือมีฝุ่นฟุ้งกระจาย ความชื้นหรือฝุ่นที่เล็ดลอดเข้าไปในตัวเครื่องอาจเป็นสาเหตุทำให้เครื่องเสีย

! PERHATIAN

Simbol ini menandakan petunjuk penting. Jika tidak dipatuhi dapat mengakibatkan cedera atau kerusakan properti.

SEGERA HENTIKAN PENGGUNAAN JIKA TERJADI MASALAH.

Jika tidak dilakukan dapat menyebabkan cedera atau kerusakan pada produk. Kembalikan ke dealer resmi Alpine Anda atau Pusat Servis resmi Alpine terdekat untuk diperbaiki.

PERANGKAIAN DAN PEMASANGAN HANYA BOLEH DILAKUKAN OLEH AHLI.

Perangkaian dan pemasangan unit ini memerlukan keahlian dan pengalaman teknis khusus. Untuk memastikan keselamatan, selalu hubungi dealer tempat Anda membeli produk ini untuk mengerjakannya.

GUNAKAN KOMPONEN AKSESORI YANG DITETAPKAN DAN PASANG SECARA AMAN.

Pastikan untuk hanya menggunakan komponen aksesoris yang ditetapkan. Penggunaan komponen selain yang ditetapkan dapat merusak bagian dalam unit atau unit mungkin tidak terpasang dengan kuat. Hal ini dapat menyebabkan komponen kendur dan membahayakan atau mengakibatkan kegagalan produk.


ATUR PENEMPATAN RANGKAIAN AGAR TIDAK TERTEKAN ATAU TERJEPIIT TEPI LOGAM YANG TAJAM.


Lewatkan kabel dan rangkaian jauh dari komponen bergerak (misalnya rel kursi) atau tepi yang tajam atau runcing. Hal ini akan mencegah rangkaian tertekan dan rusak. Jika rangkaian melewati lubang pada logam, gunakan grommet karet untuk mencegah isolasi kabel terkelupas oleh tepi lubang pada logam.

JANGAN PASANG DI LOKASI YANG TERPAPAR KELEMBAPAN ATAU DEBU.

Hindari memasang unit di lokasi yang sering terpapar kelembapan atau debu. Kelembapan atau debu yang masuk ke dalam unit ini dapat mengakibatkan kegagalan produk.


เริ่มต้นใช้งาน / Memulai

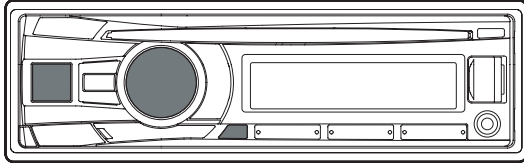

	ภาษาไทย	Indonesia
	<p>การเปิดเครื่อง กดปุ่มใดปุ่มหนึ่ง (ยกเว้นปุ่ม  และ ) เพื่อเปิดเครื่อง</p> <ul style="list-style-type: none"> เมื่อติดตั้งอุปกรณ์นี้ไว้ในรถเป็นครั้งแรก หน้าจอ DEMO OFF จะปรากฏขึ้นประมาณ 30 วินาที หลังจากเปิดใช้งานอุปกรณ์ให้กด  /ENTER ภายในเวลา 30 วินาที หากต้องการปิดโหมดสาธิตการใช้งาน 	<p>Menghidupkan Daya Tekan tombol apa saja (kecuali  dan ) untuk menghidupkan daya.</p> <ul style="list-style-type: none"> Saat memasang unit ini di mobil untuk pertama kalinya, layar DEMO OFF akan ditampilkan selama 30 detik setelah unit dinyalakan. Tekan  /ENTER dalam waktu 30 detik untuk mematikan mode Demonstrasi.
	<p>กดปุ่ม SOURCE/ ค้างไว้อย่างน้อย 2 วินาที เพื่อปิดเครื่อง</p>	<p>Tekan terus SOURCE/ selama sedikitnya 2 detik untuk mematikan unit.</p>
	<p>การเปลี่ยนแหล่งสัญญาณเข้า TUNER → DISC → USB AUDIO/iPod*¹ → AUXILIARY*² → TUNER</p> <p>*¹ สำหรับ CDE-152E/CDE-151E และเมื่อเชื่อมต่อกับ iPod/iPhone เท่านั้น *² จะปรากฏขึ้นเมื่อตั้งค่า AUX SETUP เป็น ON เท่านั้น</p>	<p>Mengganti Sumber TUNER → DISC → USB AUDIO/iPod*¹ → AUXILIARY*² → TUNER</p> <p>*¹ Hanya untuk CDE-152E/CDE-151E dan jika iPod/iPhone tersambung. *² Hanya jika AUX SETUP diatur ke ON.</p>
	การปรับเสียง	Mengatur Volume
	<p>การแสดงผลข้อมูล จอแสดงผลจะเปลี่ยนข้อมูลที่แสดงทุกครั้งที่คุณกดปุ่มนี้</p>	<p>Menampilkan Teks Tampilan akan berubah setiap kali tombol ini ditekan.</p>


ฟังก์ชัน BASS ENGINE SQ / Fungsi BASS ENGINE SQ

	ภาษาไทย	Indonesia
	<p>ด้วยฟังก์ชัน BASS ENGINE SQ ในเครื่อง ท่านสามารถปรับพารามิเตอร์ต่างๆ ของเสียงเบสได้พร้อมกัน การปรับระดับ BASS ENGINE SQ ทำให้พารามิเตอร์ต่างๆ มีความหลากหลายและผสมผสานกันอย่างลงตัวเป็นเอฟเฟกต์เสียงเบสที่ดีที่สุดที่ระดับต่างๆ กัน</p>	<p>Dengan fungsi BASS ENGINE SQ pada unit ini, beberapa parameter yang mempengaruhi kinerja Bass disesuaikan secara bersamaan. Penyesuaian level BASS ENGINE SQ memvariasikan parameter-parameter ini secara merata agar efek Bass optimal pada level berbeda.</p>
	<p>เกี่ยวกับการตั้งค่าเมื่อมีเครื่องขยายเสียงภายนอกเชื่อมต่ออยู่เพื่อให้ BASS ENGINE SQ มีประสิทธิภาพมากที่สุด เราขอแนะนำให้ทำการตั้งค่าเครื่องขยายเสียงดังต่อไปนี้</p> <p>หลังการตั้งค่า ท่านสามารถปรับระดับ BASS ENGINE SQ ตามเพลงได้</p> <ol style="list-style-type: none"> 1 ตั้งค่าอัตราขยายเสียงของเครื่องขยายเสียงไปที่ "MIN" 2 ตั้งค่าสวิตช์เปลี่ยนโหมดไปที่ "OFF" 3 ตั้งค่า BASS ENGINE ของตัวเครื่องไปที่ "ON", และตั้งระดับ BASS ENGINE SQ ไปที่ "+3" 4 เล่นเพลงในประเภทที่ท่านฟังเป็นประจำ และปรับอัตราขยายเสียงของเครื่องขยายเสียง 	<p>Tentang Penyiapan saat amplifier daya eksternal disambungkan. Untuk mengoptimalkan BASS ENGINE SQ, kami menyarankan penyiapan amplifier daya berikut ini. Setelah penyiapan, Anda dapat menyesuaikan Level BASS ENGINE SQ sesuai dengan musiknya.</p> <ol style="list-style-type: none"> 1 Atur gain amplifier daya ke "MIN". 2 Atur sakelar Sektor Mode Crossover ke "OFF". 3 Atur BASS ENGINE unit ini ke "ON", dan Level BASS ENGINE SQ ke "+3". 4 Putar lagu yang genre-nya sering Anda dengar, dan sesuaikan gain amplifier daya.

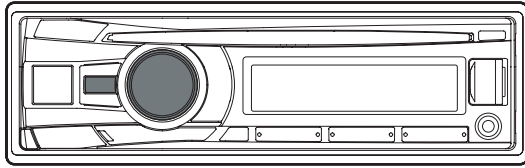


		ภาษาไทย	Indonesia
1		เปิดใช้งานโหมด BASS ENGINE SQ กดค้างไว้เพื่อเปลี่ยนไปที่โหมด BASS ENGINE BASS ENGINE ↔ MANUAL SET (ค่าเริ่มต้น)	Aktifkan mode BASS ENGINE SQ. Tekan terus untuk beralih ke mode BASS ENGINE. BASS ENGINE ↔ MANUAL SET (Pengaturan awal)
2-1		การปรับระดับ BASS ENGINE SQ	Menyesuaikan level BASS ENGINE SQ.
2-2		แสดงหน้าจอการปรับระดับ BASS ENGINE SQ เลือกระดับที่ต้องการ (0 - +6) (ค่าเริ่มต้น: +3)	Menampilkan layar penyesuaian Level BASS ENGINE SQ. Pilih level (0 - +6) yang diinginkan. (Pengaturan awal: +3)
3		เข้าใช้งาน	Masukkan.
		<ul style="list-style-type: none"> ไฟแสดง จะแสดงขึ้นเมื่อโหมด BASS ENGINE SQ อยู่ ON จากระดับ 0 ถึงระดับ 6 เอฟเฟกต์ของ BASS ENGINE SQ จะเพิ่มขึ้นทีละระดับ ไฟแสดง จะแสดงระดับ BASS ENGINE SQ ปัจจุบัน 	<ul style="list-style-type: none"> indikator menyala saat mode BASS ENGINE SQ berada dalam posisi ON. Dari Level 0 hingga Level 6, efek BASS ENGINE SQ meningkat selevel demi selevel. indikator menampilkan Level BASS ENGINE SQ saat ini.



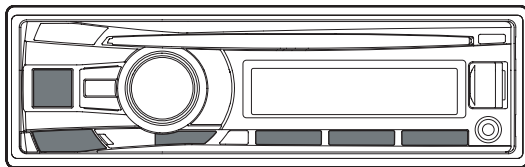






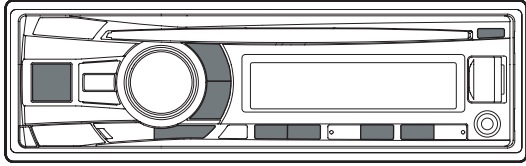



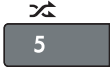

วิทยุ / Radio




		ภาษาไทย	Indonesia
1		เรียกใช้งานโหมด TUNER เลือกโหมด TUNER	Membuka Mode TUNER Pilih mode TUNER.
2		การเปลี่ยนคลื่นวิทยุ FM1 → FM2 → AM → FM1	Mengganti Band FM1 → FM2 → AM → FM1
3		การตั้งสถานีวิทยุอัตโนมัติ กดปุ่มนี้ค้างไว้อย่างน้อย 2 วินาที จูนเนอร์จะค้นหาและบันทึกสถานีที่มีสัญญาณแรง 6 สถานี ในคลื่นวิทยุที่เลือกไว้	Membuat Stasiun Preset Secara Otomatis Tekan terus selama sedikitnya 2 detik. Tuner akan mencari dan menyimpan 6 stasiun dengan penerimaan kuat dalam band yang dipilih.
4		การจูนหาสถานีวิทยุที่ตั้งไว้	Menyetel ke Stasiun Preset

CD/MP3/WMA



	ภาษาไทย	Indonesia
	เรียกใช้งานโหมด DISC เลือกโหมด DISC	Membuka Mode DISC Pilih mode DISC.
	การหยุดเล่นชั่วคราวและการเล่น	Jeda dan Pemutaran
	การเลือกเพลงที่ต้องการ กดและปล่อยปุ่ม <<< หรือ >>> เพื่อข้ามไปยังจุดเริ่มต้นของเพลงปัจจุบันหรือเพลงถัดไป	Memilih lagu yang diinginkan Tekan dan lepaskan <<< atau >>> untuk melompat ke awal lagu yang diputar atau lagu berikutnya.
	กดปุ่ม <<< หรือ >>> ค้างไว้เพื่อย้อนกลับหรือเร่งไปข้างหน้าอย่างรวดเร็ว	Tekan terus <<< atau >>> untuk mundur cepat atau maju cepat.
	การเลือกโฟลเดอร์ที่ต้องการ (MP3/WMA)	Memilih folder yang diinginkan (MP3/WMA)
	M.I.X. (การสุ่มเล่น)  : สุ่มเล่นเฉพาะไฟล์ที่อยู่ในโฟลเดอร์หนึ่งเท่านั้น (MP3/WMA) ALL  : เพลง/ไฟล์ในแผ่นดิสก์จะสุ่มเล่น (off) : ยกเลิก	M.I.X. (Putar Acak)  : Hanya file dalam folder itu yang akan diputar secara acak. (MP3/WMA) ALL  : Trek/file di disk diputar dalam urutan acak. (off) : Batal
	การเล่นซ้ำ  : เล่นซ้ำเฉพาะเพลง/ไฟล์หนึ่งเท่านั้น  : เล่นซ้ำเฉพาะไฟล์ที่อยู่ในโฟลเดอร์หนึ่งเท่านั้น (MP3/WMA) (off) : ยกเลิก	Putar Ulang  : Hanya track/file itu yang akan diputar berulang kali.  : Hanya file dalam folder itu yang akan diputar berulang kali. (MP3/WMA) (off) : Batal
	นำแผ่นออก	Keluarkan


แฟลชไดรฟ์ USB (อุปกรณ์เสริม) / Memori USB (Optional)

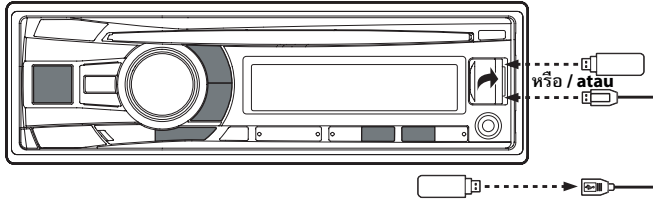

- ถ้าเสียบแฟลชไดรฟ์ USB เข้ากับตัวเครื่อง ท่านจะสามารถเล่นไฟล์ MP3/WMA ที่เก็บอยู่ในแฟลชไดรฟ์ USB ดังกล่าวได้ / Jika perangkat Memori USB terhubung ke unit ini, file MP3/WMA yang tersimpan pada perangkat Memori USB tersebut dapat diputar.


	ภาษาไทย	Indonesia
	เรียกใช้งานโหมด USB AUDIO เลือกโหมด USB AUDIO	Membuka Mode USB AUDIO Pilih mode USB AUDIO.
	การหยุดเล่นชั่วคราวและการเล่น	Jeda dan Pemutaran
	การเลือกเพลงที่ต้องการ กดและปล่อยปุ่ม << หรือ >> เพื่อข้ามไปยังจุดเริ่มต้นของเพลงปัจจุบันหรือเพลงถัดไป กดปุ่ม << หรือ >> ค้างไว้เพื่อย้อนกลับหรือเร่งไปข้างหน้าอย่างรวดเร็ว	Memilih lagu yang diinginkan Tekan dan lepaskan << atau >> untuk melompat ke awal lagu yang diputar atau lagu berikutnya. Tekan terus << atau >> untuk mundur cepat atau maju cepat.
	M.I.X. (การสุ่มเล่น) ALL : สุ่มเล่นเพลงทั้งหมดในโฟลเดอร์ปัจจุบัน ALL (off) : สุ่มเล่นเพลงทั้งหมดในแฟลชไดรฟ์ USB (off) : ยกเลิก	M.I.X. (Putar Acak) ALL : Semua lagu dalam folder yang aktif akan diputar secara acak. ALL (off) : Semua lagu dalam Memori USB akan diputar secara acak. (off) : Batal
	การเล่นซ้ำ : เล่นซ้ำเฉพาะไฟล์หนึ่งเท่านั้น : เล่นซ้ำเฉพาะไฟล์ที่อยู่ในโฟลเดอร์หนึ่งเท่านั้น (off) : ยกเลิก	Putar Ulang : Hanya file itu yang akan diputar berulang kali. : Hanya file dalam folder itu yang akan diputar berulang kali. (off) : Batal

iPod/iPhone (อุปกรณ์เสริม) (CDE-152E/CDE-151E เท่านั้น) / iPod/iPhone (Opsional) (CDE-152E/CDE-151E saja)

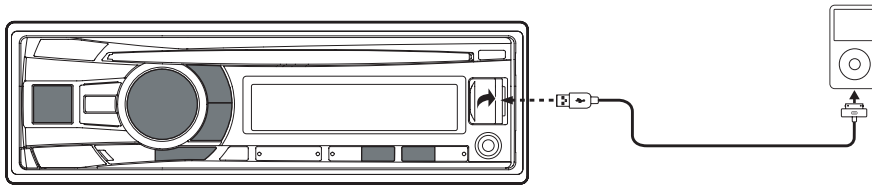

	ภาษาไทย	Indonesia
	ท่านสามารถเชื่อมต่อเครื่อง iPod/iPhone เข้ากับเครื่องนี้ได้ โดยการใช้งานสายสัญญาณของ iPod/iPhone (ให้มาพร้อมกับเครื่อง iPod/iPhone)	iPod/iPhone dapat dihubungkan ke unit dengan menggunakan kabel Antarmuka untuk iPod/iPhone (disertakan dengan iPod/iPhone).
	เรียกใช้งานโหมด iPod เลือกโหมด iPod	Membuka Mode iPod Pilih mode iPod.
	การหยุดเล่นชั่วคราวและการเล่น	Jeda dan Pemutaran
	การเลือกเพลงที่ต้องการ กดและปล่อยปุ่ม หรือ เพื่อข้ามไปยังจุดเริ่มต้นของเพลงปัจจุบันหรือเพลงถัดไป	Memilih lagu yang diinginkan Tekan dan lepaskan atau untuk melompat ke awal lagu yang diputar atau lagu berikutnya.
	กดปุ่ม หรือ ค้างไว้เพื่อย้อนกลับหรือเร่งเพลงปัจจุบันไปข้างหน้าอย่างรวดเร็ว	Tekan terus atau untuk mundur cepat atau maju cepat.
	การสุ่มเล่น (M.I.X.) (สุ่มเล่นอัลบั้ม): การสุ่มเล่นอัลบั้มจะเล่นเพลงทั้งหมดในอัลบั้มหนึ่งตามลำดับ จากนั้นจึงสุ่มเลือกอัลบั้มถัดไป (สุ่มเล่นเพลง): การสุ่มเล่นเพลงจะเล่นเพลงในประเภทที่เลือกไว้ (รายชื่อเพลง, อัลบั้ม, ฯลฯ) (off) : ยกเลิก	Kocok Pemutaran Acak (M.I.X.) (Kocok Album): Pemutaran kocok album akan memutar semua lagu secara urut, lalu memilih album berikutnya secara acak. (Kocok Lagu): Kocok lagu akan memutar kembali lagu-lagu secara acak dalam kategori yang dipilih (daftar putar, album, dll.). (off) : Batal
	การสุ่มเล่นทั้งหมด 1. กดปุ่ม /ENTER เพื่อเปิดใช้งานโหมดเลือกค้นหา 2. หมุนตัวแปลงสัญญาณ เพื่อเลือก SHUFFLEALL จากนั้นกดปุ่ม /ENTER : การสุ่มเล่นทั้งหมดจะเล่นเพลงทั้งหมดที่อยู่ใน iPod/iPhone แบบสุ่ม • หากต้องการยกเลิกโหมดสุ่มเล่นทั้งหมด ให้กด 5 เพื่อเลือก MIX OFF	Kocok Pemutaran Acak SEMUA 1. Tekan /ENTER untuk mengaktifkan mode pilihan pencarian. 2. Putar Encoder rotari untuk memilih SHUFFLEALL, kemudian tekan /ENTER. : Kocok SEMUA memutar semua lagu di iPod/iPhone secara acak. • Untuk membatalkan mode Kocok SEMUA, tekan 5 untuk memilih MIX OFF.
	การเล่นซ้ำ : เล่นซ้ำเพียงหนึ่งเพลง (off) : ยกเลิก	Putar Ulang : Hanya lagu itu yang akan diputar berulang kali. (off) : Batal


การค้นหาเพลงที่ต้องการ (iPod/iPhone) / Mencari Lagu yang diinginkan (iPod/iPhone)

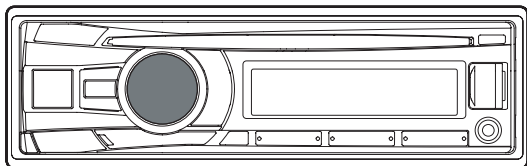

ลำดับชั้นที่ 1 / Hierarki 1	ลำดับชั้นที่ 2 / Hierarki 2	ลำดับชั้นที่ 3 / Hierarki 3	ลำดับชั้นที่ 4 / Hierarki 4
รายการเพลง / Daftar Putar	เพลง / Lagu	—	—
ศิลปิน / Artis	อัลบั้ม / Album	เพลง / Lagu	—
อัลบั้ม / Album	เพลง / Lagu	—	—
เพลง / Lagu	—	—	—
พอดแคสต์ / Podcast	ตอนที่ / Episode	—	—
ประเภท / Genre	ศิลปิน / Artis	อัลบั้ม / Album	เพลง / Lagu
นักแต่งเพลง / Komposer	อัลบั้ม / Album	เพลง / Lagu	—
หนังสือเสียง / Buku Audio	—	—	—
รายการเล่นแบบ Mix อัจฉริยะ / Daftar Campuran Genius	—	—	—

		ภาษาไทย	Indonesia
1		ใช้งานโหมดเลือกค้นหา	Aktifkan mode pilihan pencarian.
2		เลือกโหมดค้นหาที่ต้องการ PLAYLIST/ARTIST/ALBUM/SONG/PODCAST/GENRE/ COMPOSER/AUDIOBOOK/GENIUS MIX • รายการโหมดค้นหาที่แสดงขึ้นมาจะแตกต่างกันไปโดยขึ้นอยู่กับ การตั้งค่าของ iPod LIST	Pilih mode pencarian yang diinginkan. PLAYLIST/ARTIST/ALBUM/SONG/PODCAST/ GENRE/COMPOSER/AUDIOBOOK/GENIUS MIX • Tampilan daftar mode pencarian bervariasi tergantung pada pengaturan iPod LIST.
3		เข้าใช้งาน	Enter
4		เลือกรายการที่ต้องการ	Pilih judul yang diinginkan.
5		เข้าใช้งาน โหมดเพลง/หนังสือเสียง/ ค้นหาแบบ Mix อัจฉริยะ: รายการเล่นแบบ Mix อัจฉริยะ/ หนังสือเสียง/เพลงที่เลือก จะถูกเล่น โหมดค้นหาอื่น: ข้ามไปยังลำดับชั้นถัดไป ค้นหารายการโดยการปฏิบัติ ตามขั้นตอนที่ 4 และ 5 ซ้ำๆ	Enter Mode Pencarian Lagu/ Buku Audio/Campuran Genius: Daftar lagu/buku audio/ campuran genius yang dipilih diputar. Mode Pencarian lainnya: Lanjutkan ke level hierarki berikutnya. Carilah judul dengan melakukan langkah 4 dan 5 berulang kali.
		<ul style="list-style-type: none"> หลังจากกด Q/ENTER ค้างไว้เป็นเวลาอย่างน้อย 2 วินาที ในขณะที่อยู่ในแต่ละลำดับชั้น (ยกเว้นลำดับชั้นของรายการเล่นแบบ MIX อัจฉริยะ, หนังสือเสียง และเพลง) เพลงทั้งหมดของลำดับชั้นที่เลือกจะถูกเล่น เมื่อทำการค้นหาในระหว่างการเล่นแบบ M.I.X. เครื่องจะยกเลิกการทำงานของโหมดเล่น M.I.X. 	<ul style="list-style-type: none"> Setelah menekan dan menahan Q/ENTER selama sedikitnya 2 detik saat di masing-masing hierarki (kecuali hierarki daftar Lagu, Buku Audio, dan Campuran Genius), semua lagu dari hierarki yang dipilih akan diputar. Apabila pencarian dilakukan selama pemutaran M.I.X, maka mode pemutaran M.I.X. akan dibatalkan.

การตั้งเวลา / Mengatur Waktu

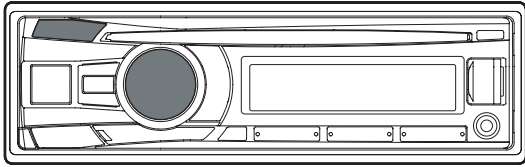

		ภาษาไทย	Indonesia
1		เปิดใช้งานโหมด SETUP กดปุ่มนี้ค้างไว้อย่างน้อย 2 วินาที	Aktifkan mode SETUP. Tekan terus selama sedikitnya 2 detik.
2		เลือกโหมด General	Pilih mode General
3		เข้าใช้งาน	Enter
4		เลือกโหมด CLOCK ADJ	Pilih mode CLOCK ADJ
5		เข้าใช้งาน	Enter
6		ตั้งค่าชั่วโมง	Sesuaikan jam.
7		เข้าใช้งาน ทำซ้ำขั้นตอนที่ 6 และ 7 เพื่อปรับตั้งนาฬิกา	Enter Ulangi langkah 6 dan 7 untuk menyesuaikan menit.
8		กลับไปยังโหมดปกติ กดปุ่มนี้ค้างไว้อย่างน้อย 2 วินาที	Kembali ke mode normal. Tekan terus selama sedikitnya 2 detik.

ข้อมูลจำเพาะ / Spesifikasi

ส่วนจูนเนอร์ FM

ช่วงจูนสัญญาณ 87.5-108.0 MHz

ส่วนจูนเนอร์ AM

ช่วงจูนสัญญาณ 531-1,602 kHz

ทั่วไป

ความต้องการกำลังไฟ 14.4 V DC
(สามารถใช้ไฟ 11-16 V ได้)
กำลังขับสูงสุด 50 W × 4
น้ำหนัก 1.24 กก. (2 ปอนด์ 11 ออนซ์)

ขนาด chassis

กว้าง 178 มม. (7")
สูง 50 มม. (2")
ลึก 160.5 มม. (6-5/16")

- Windows Media และ โลโก้ Windows เป็นเครื่องหมายการค้าหรือเครื่องหมายการค้าจดทะเบียนของบริษัท Microsoft Corporation ในประเทศสหรัฐอเมริกา และ/หรือประเทศอื่นๆ
- iPhone, iPod, iPod classic, iPod nano และ iPod touch เป็นเครื่องหมายการค้าของบริษัท Apple Inc. ซึ่งจดทะเบียนในประเทศสหรัฐอเมริกาและประเทศอื่นๆ
- "Made for iPod," และ "Made for iPhone," หมายความว่าอุปกรณ์เสริมอิเล็กทรอนิกส์ดังกล่าวได้รับการออกแบบมาโดยเฉพาะเพื่อเชื่อมต่อกับเครื่อง iPod หรือ iPhone ตามลำดับ และได้รับการรับรองโดยผู้พัฒนาว่าได้มาตรฐานด้านประสิทธิภาพของ Apple Apple จะไม่รับผิดชอบต่อการใช้งานผลิตภัณฑ์นี้หรือความได้มาตรฐานด้านความปลอดภัยและข้อบังคับต่างๆ ที่ระลึกไว้เสมอว่า การใช้งานอุปกรณ์เสริมนี้ร่วมกับเครื่อง iPod หรือ iPhone อาจส่งผลกระทบต่อประสิทธิภาพของสัญญาณไร้สาย
- เทคโนโลยีการเข้ารหัสไฟล์เสียงแบบ MPEG Layer-3 ได้รับอนุญาตจากบริษัท Fraunhofer IIS และ Thomson ผลิตภัณฑ์ที่จัดทำจำหน่ายได้รับอนุญาตให้ใช้งานเป็นส่วนตัวและไม่ใช่อุปกรณ์ลิขสิทธิ์ โดยไม่อนุญาตให้ใช้งานในการออกอากาศแบบเรียลไทม์เชิงพาณิชย์ (เช่น เพื่อขายได้) (ภาคพื้นดิน ผ่านดาวเทียม สายเคเบิล และ/หรือ สื่ออื่นๆ), การออกอากาศ/สตรีมมิ่งผ่านอินเทอร์เน็ต อินทราเน็ต และ/หรือเครือข่ายอื่นๆ หรือระบบจัดสรรเนื้อหาแบบอิเล็กทรอนิกส์ เช่น โปรแกรมวิทยุแบบชำระเงินหรือแบบรับฟังเสียงตามประสงค์ ซึ่งจำเป็นต้องขอใบอนุญาตเป็นการเฉพาะสำหรับใช้งานดังกล่าว โปรดดูรายละเอียดเพิ่มเติมได้ที่เว็บไซต์ <http://www.mp3licensing.com>

BAGIAN TUNER FM

Kisaran Setelan 87,5-108,0 MHz

BAGIAN TUNER AM

Kisaran Setelan 531-1.062 kHz

UM UM

Persyaratan Daya 14,4 V DC
(11-16 V dibolehkan)
Output Daya Maksimum 50 W × 4
Berat 1,24 kg (2 lbs. 11 oz)


UKURAN CHASSIS

Lebar 178 mm (7")
Tinggi 50 mm (2")
Dalam 160,5 mm (6-5/16")


- Logo Windows Media dan Windows adalah merek dagang, atau merek dagang terdaftar dari Microsoft Corporation di Amerika Serikat dan di negara-negara lain.
- iPhone, iPod, iPod classic, iPod nano, dan iPod touch adalah merek dagang dari Apple Inc., yang terdaftar di A.S. dan di negara-negara lain.
- "Made for iPod," dan "Made for iPhone," menunjukkan bahwa aksesor elektronik tersebut telah dirancang untuk dihubungkan secara khusus ke masing-masing iPod, atau iPhone, dan telah disertifikasi oleh pengembang untuk memenuhi standar performa Apple. Apple tidak bertanggung jawab atas pengoperasian perangkat ini atau kepatuhannya pada standar keselamatan dan regulasi. Harap diperhatikan bahwa penggunaan aksesor ini dengan iPod atau iPhone dapat mempengaruhi performa nirkabel.
- Teknologi penyandian audio MPEG Layer-3 dilisensikan dari Fraunhofer IIS dan Thomson. Penyediaan produk ini hanya memberikan lisensi untuk penggunaan pribadi, non-komersial dan tidak memberikan lisensi atau menyiratkan hak apa pun untuk menggunakan produk ini untuk keperluan penyiaran dalam waktu-nyata (darat, satelit, kabel, dan/atau media apa pun lainnya) apa pun yang bersifat komersial (yakni, untuk memperoleh pendapatan), penyiaran/streaming melalui internet, intranet dan/atau jaringan lainnya, atau dalam sistem distribusi konten elektronik lainnya, seperti aplikasi audio berbayar atau audio saat dibutuhkan. Penggunaan tersebut memerlukan lisensi yang terpisah. Untuk informasi selengkapnya, kunjungi <http://www.mp3licensing.com>

การติดตั้ง / Pemasangan

- เมื่อทำการเชื่อมต่อกับระบบไฟฟ้าของรถยนต์ โปรดตรวจสอบอุปกรณ์ที่ติดตั้งมาจากโรงงาน (เช่น คอมพิวเตอร์ออนบอร์ด) ห้ามลัดลอมเชื่อมต่อกับสายไฟเพื่อจ่ายไฟให้เครื่องนี้ เมื่อต้องการเชื่อมต่อเครื่อง CDE-152E/CDE-151E/CDE-150E เข้ากับกล่องฟิวส์ ต้องตรวจสอบให้แน่ใจว่า ฟิวส์ของวงจรที่จะใช้กับเครื่อง CDE-152E/CDE-151E/CDE-150E มีขนาดแอมแปร์เหมาะสม การละเลยไม่ปฏิบัติตาม อาจเป็นสาเหตุทำให้เครื่อง และ/หรือ รถยนต์ได้รับความเสียหาย หากมีข้อสงสัย โปรดสอบถามจากผู้แทนจำหน่าย Alpine ของท่าน
- ต้องติดตั้งตัวเครื่องหลักห้ามเกิน 35 องศา จากแนวระนาบ จากหลังไปหน้า

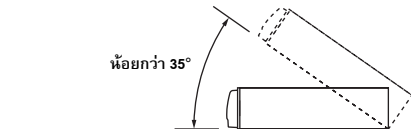


1

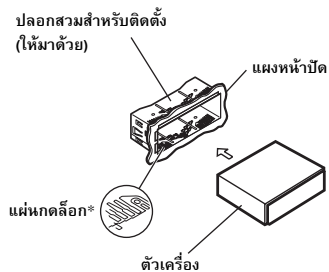

- * ถ้าปลอกสวมสำหรับติดตั้งหลวมเกินไปเมื่อติดตั้งเข้ากับแผงหน้าปัดให้งัดแผ่นกดล็อกเล็กน้อยเพื่อแก้ไขปัญหานี้

2

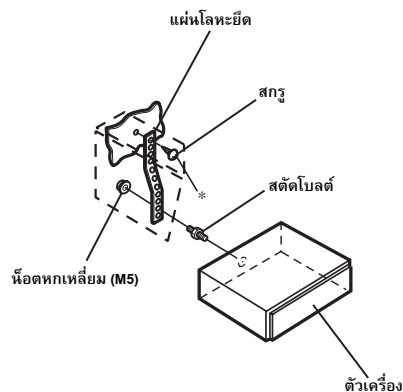


ยึดสายกราวนด์ของเครื่องเข้ากับโลหะตัวถัง

- สำหรับตำแหน่งสกรูที่ตำแหน่ง "*" ให้ใช้สกรูที่เหมาะสมกับตำแหน่งยึดที่เลือกไว้


3

สอดเลื่อนตัวเครื่อง CDE-152E/CDE-151E/CDE-150E เข้าไปในแผงหน้าปัด จนกระทั่งได้ยินเสียงคลิกเข้าที่ ซึ่งแสดงว่าตัวเครื่องเข้าล็อกอย่างถูกต้อง และ ไม่หลุดออกจากแผงหน้าปัด

- Ketika menyambungkan ke sistem kelistrikan kendaraan, perhatikan komponen yang dipasang pabrik (mis. komputer on-board). Jangan gunakan kabel ini untuk mencatu daya ke unit. Ketika menyambungkan CDE-152E/CDE-151E/CDE-150E ke kotak sekering, pastikan sekering untuk sirkuit CDE-152E/CDE-151E/CDE-150E memiliki rating ampere yang sesuai. Jika tidak dilakukan dapat mengakibatkan kerusakan pada unit dan/atau kendaraan. Jika ragu-ragu, konsultasikan dengan dealer Alpine Anda.
- Unit utama harus dipasang dengan kemiringan di bawah 35 derajat dari bidang horizontal, dari belakang ke depan.

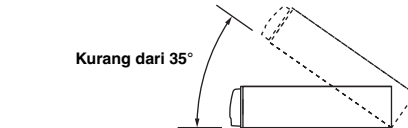


1

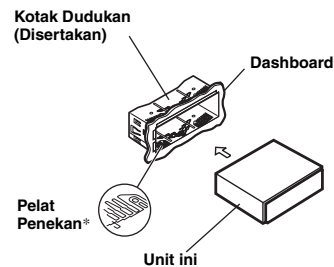

- * Jika kotak dudukan kendor pada dashboard, pelat penekan dapat diteuk sedikit untuk mengatasi masalah tersebut.

2

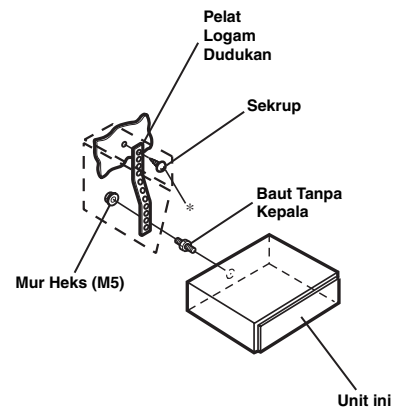


Kencangkan kabel ground pada unit ke titik logam yang bersih.

- Untuk sekrup bertanda "*", gunakan sekrup yang sesuai untuk lokasi pemasangan yang dipilih.

3

Geser untuk memasukkan CDE-152E/CDE-151E/CDE-150E ke dalam dashboard sampai berbunyi klik. Hal ini memastikan bahwa unit telah terkunci dengan baik dan tidak akan terlepas tanpa sengaja dari dashboard.

การเชื่อมต่อ / Sambungan

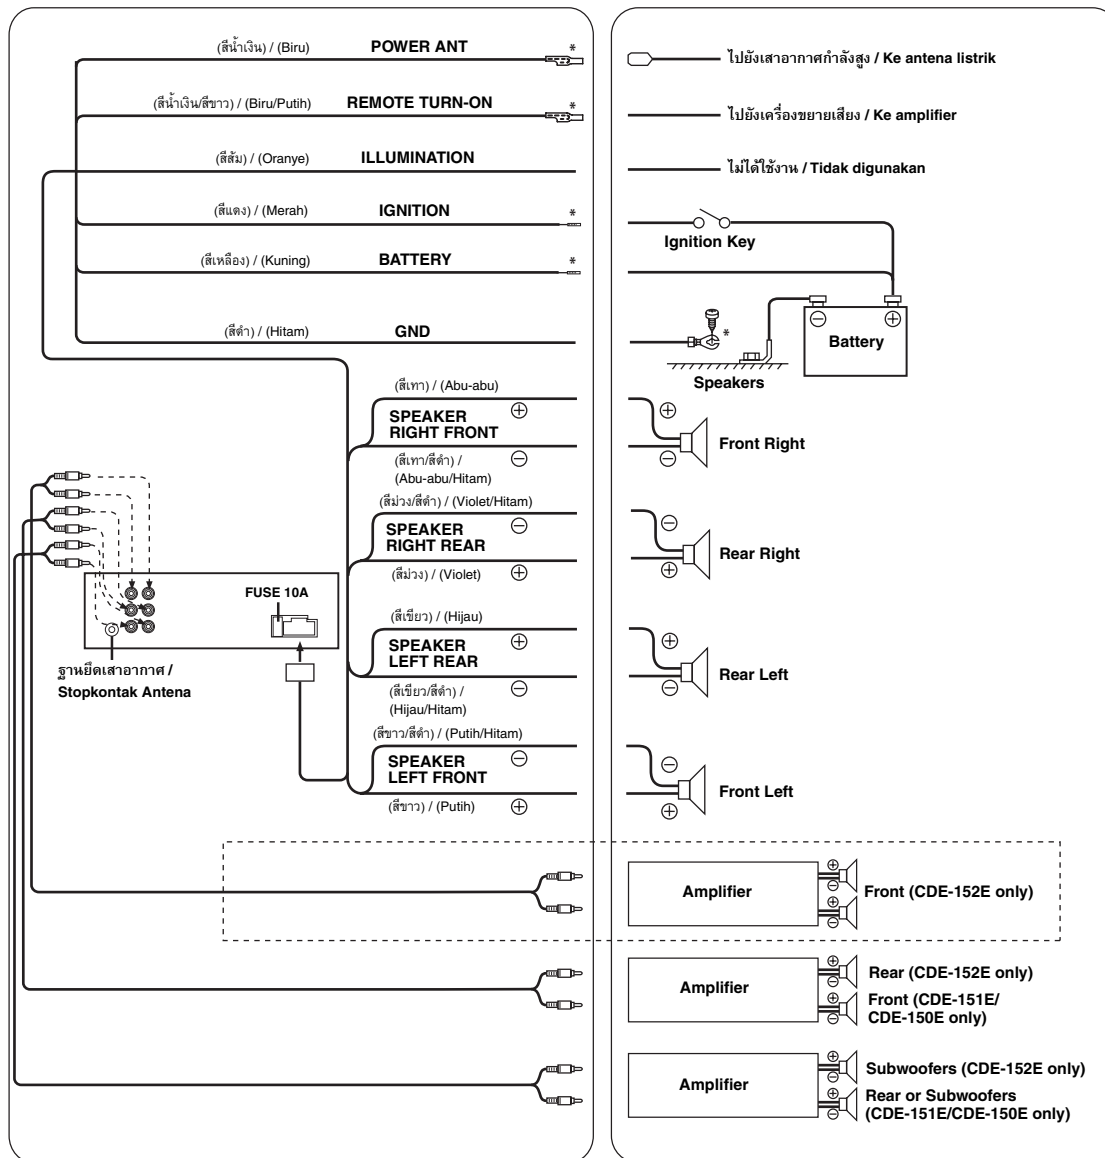

* ภาพประกอบสายไฟข้างต้นใช้สำหรับ CDE-152E/CDE-151E สายไฟสำหรับ CDE-150E เป็นแบบ cut wire เช่นเดียวกับกับสาย illumination เมื่อใช้สายไฟที่ถูกตัด โปรดตรวจสอบให้แน่ใจว่ามีการเชื่อมต่อที่ถูกต้อง หากการเชื่อมต่อไม่ถูกต้องอาจทำให้เกิดไฟไหม้หรือความเสียหายกับผลิตภัณฑ์ได้ หากมีสายที่ไม่ได้ใช้งาน โปรดใช้เทปพันสายไฟพันปิดไว้ / Gambar lead ini ditujukan untuk CDE-152E/CDE-151E. Lead untuk CDE-150E terpotong seperti kawat, seperti di Illumination Lead. Jika kawat utama yang digunakan adalah kawat terpotong, lakukan sambungan yang benar. Jika tidak disambungkan dengan benar dapat mengakibatkan kebakaran atau kerusakan produk. Jika terdapat saluran yang tidak digunakan, tutup dengan isolasi kabel.

